

MacBook Air 13" Late 2010 Right Speaker Replacement

Written By: Dozuki System



INTRODUCTION

Use this guide to replace a blown-out right speaker.



TOOLS:

- P5 Pentalobe Screwdriver Retina MacBook Pro and Air (1)
- Spudger (1)
- T5 Torx Screwdriver (1)



PARTS:

 MacBook Air 13" (Late 2010) Right Speaker (1)

Step 1 — MacBook Air 13" Late 2010 Right Speaker Replacement



- Before proceeding, close your computer and lay it on a soft surface top-side down.
 - Remove the following ten screws:
 - Two 9 mm 5-point Pentalobe screws
 - Eight 2.6 mm 5-point Pentalobe screws
- i The special screwdriver needed to remove the eight 5-point Pentalobe screws can be found.

Step 2




- Wedge your fingers between the display and the lower case and pull upward to pop the lower case off the Air.
- Remove the lower case and set it aside.

Step 3



- Grab the clear plastic pull tab attached to the battery connector and pull it toward the front edge of the Air to disconnect the battery from the logic board.
- ⚠ Do not lift upward on the connector as you disconnect it.

Step 4

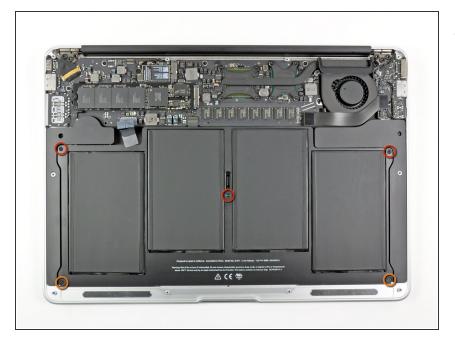


- Remove the following five screws securing the battery to the upper case:
 - Three 6.3 mm T5 Torx screws
 - Two 2.4 mm T5 Torx screws

Step 5



- ↑ When handling the battery, avoid squeezing or touching the four exposed lithium polymer cells.
- Lift the battery from its edge nearest the logic board and remove it from the upper case.

Step 6

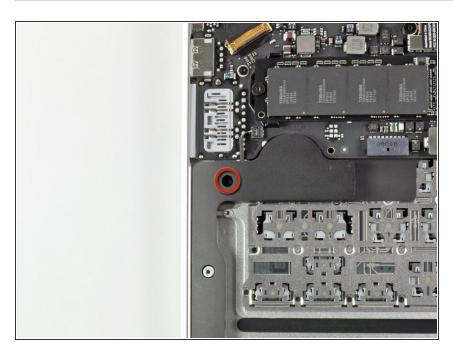

 Remove the single 2.7 mm T5 Torx screw securing the right speaker to the upper case.

Step 7



- Use the flat end of a spudger to pry the right speaker connector up and out of its socket on the logic board.
- (i) Pry up from beneath the wires.

Step 8



- Use the flat end of a spudger to pry the right speaker off the adhesive securing it to the upper case.
- Remove the right speaker from the upper case.

To reassemble your device, follow these instructions in reverse order.