



Nintendo DS Back Panel Replacement

Written By: Dozuki System



INTRODUCTION

Removing the back panel is simple, provided you have the correct screwdriver. Nintendo uses a special Tri-wing bit for the case, be sure you have one of these before disassembling!



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [Tri-wing Screwdriver](#) (1)
-

Step 1 — Nintendo DS Back Panel Replacement



- Remove the cartridge from the console.
- Use a Phillips #00 Screwdriver to remove the screw securing the battery door to the rear case.
- Remove the battery door.

Step 2



- Use a plastic opening tool or spudger to pry out the battery from the bottom. If a plastic open tool or spudger isn't available, your fingernails may work.

Step 3



- Remove the battery from the Nintendo DS.

Step 4



- Remove the 7 Y0 screws located on the back.
- ⓘ It might be helpful to remove the strap from the hole to access the top left screw.

Step 5



- With your hands, pry the back panel off the main case.
- Separate the back from the front, and set it aside.

To reassemble your device, follow these instructions in reverse order.