



Inkjet Printer

Written By: nst



INTRODUCTION

Due to the large variety of printers available on the market it is impossible to give a specific manual how to dismantle a printer. Therefore, the dismantling steps for inkjet printers indicated below have to be adapted from case to case. No dismantling times and average weight can be indicated.



TOOLS:

- [Several screwdrivers \(T1\)](#) (1)
 - [Flathead Screwdriver \(T2\)](#) (1)
 - [Side cutter \(T4\)](#) (1)
 - [Pliers \(T5\)](#) (1)
 - [Industrial Scissors \(T6\)](#) (1)
 - [Power Screw Driver \(T8\)](#) (1)
 - [Industrial scale \(T9\)](#) (1)
-

Step 1 — Inkjet Printer



- Remove the ink cartridges and put them aside. Cartridges can be refilled and reused!

 
⚠ In case they are broken, they need to be disposed of as hazardous waste.

Step 2




- Open the plastic casing by unscrewing all screws and removing clips. Clean the casing properly by removing all the foreign materials in the plastic such as labels, rubber mountains etc.
- Make sure the plastic parts are completely free of metal pieces.

Step 3

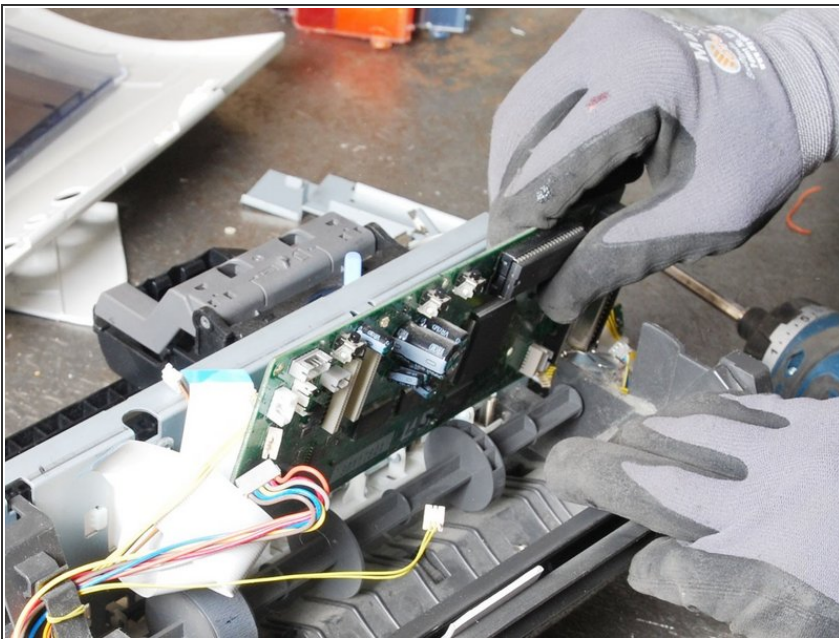


- Unscrew and remove the PWB.

 Step 4

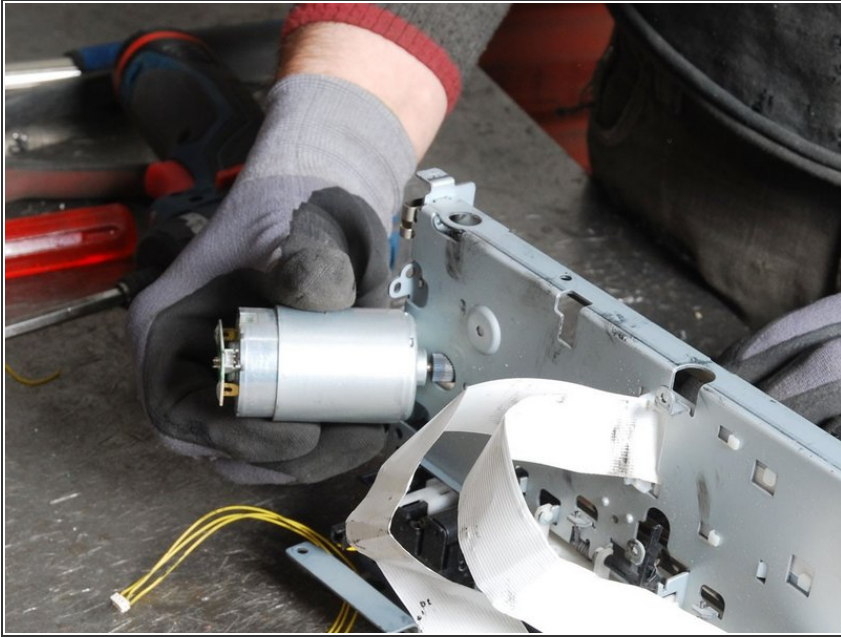

- Remove the printer motor. If possible, separate the copper coil or the magnets inside the motor.
- The magnets should be stored separately .

 Step 5

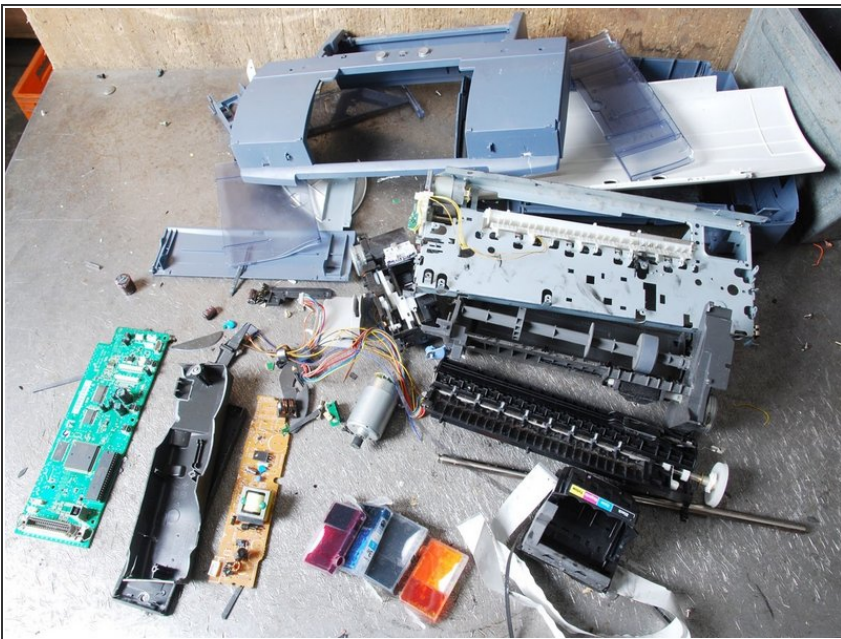

- Separate the remaining materials according to their type.
- Make sure the plastic parts are completely free of metal pieces.