

Sony VAIO PCG-933A Thermal Paste Replacement

Written By: Dozuki System



INTRODUCTION

How to replace the thermal paste into your laptop.

TOOLS:

۶

- Phillips #0 Screwdriver (1)
- High Content Rubbing Alcohol (1)

Step 1 — Sony VAIO PCG-933A Thermal Paste Replacement



- Turn the laptop upside down
- The battery is located on the front right side of the laptop; the opposite side from the floppy disk drive.

Step 2



- As shown by the arrow, slide the plastic cover up and then pull out and downwards.
- You should now be able to pull the battery out.



 Remove the four 16mm Phillips screws bordering the edge of the laptop, indicated here.

Step 4



- Remove the 4mm Phillips screw on the right rear side of the laptop next to the audio ports.
- This will release the speaker grille.



• Flip the computer back over and open the screen.

Step 6




- Slide the blue speaker grille (located above the keyboard) to the right and gently pull upward. The grille will still be connected by a white electrical strip.
- Carefully pull out the white electrical strip.



- Remove the 4mm Phillips screw in the center (located to the left of the green strip).
- Carefully pull the green strip straight up to disconnect it.
- The keyboard can now be removed.

Step 8

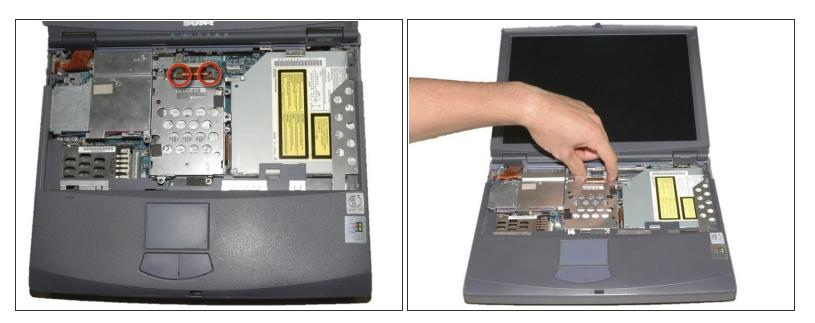


 Remove the two 4mm Phillips screws in the center of the computer located on each side of the copper electrical strip.



- Remove the four 4mm Phillips screws around the hard drive cage.
- MARNING: DVD drive is now loose as well.
- Lift hard drive cage straight up.
- Carefully disconnect the copper strip to pull out the hard drive.

Step 10

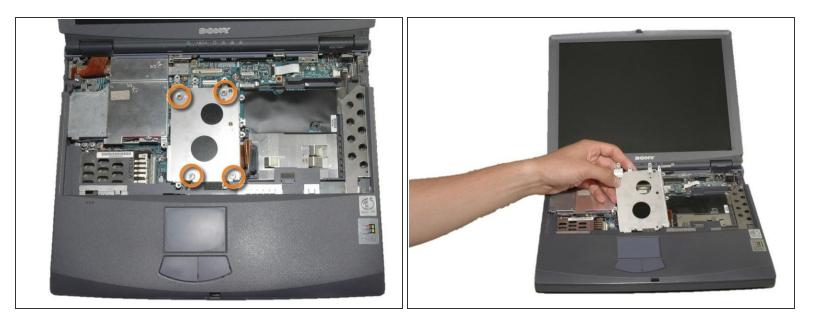


- With the hard drive removed, unscrew the four 6mm brass colored, Phillips screws under the hard drive cage
- This will allow you to remove the hard drive mounting bracket




 Remove the three 6mm brass colored, Phillips screws that hold the fan cage in place.

Step 12

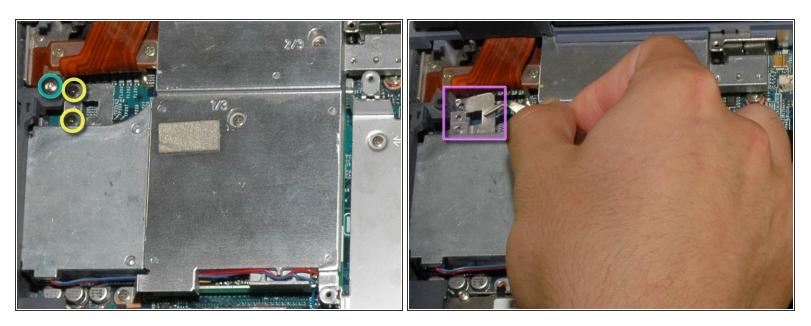

- Remove the two 4mm black Phillips screws shown here.
- Remove the 18mm silver Phillips screw shown here.
- Now remove the silver tab.

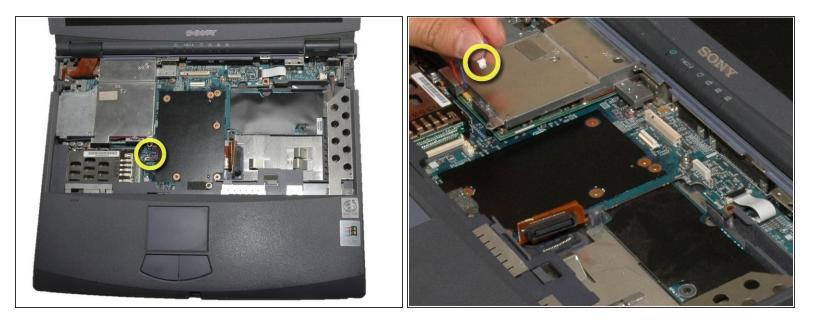


• Remove the blue and red fan power cords.

Step 14



- Carefully pull up and out on the metal heat sink and fan bracket.
- You should be able to see the thermal paste.

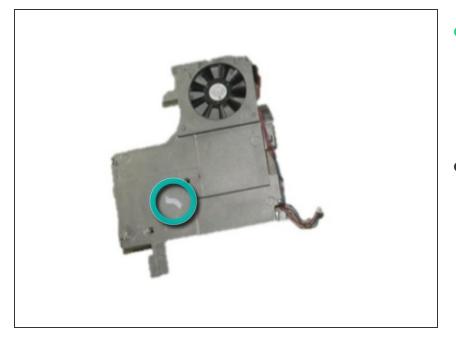

- To remove thermal paste thoroughly, put isopropyl alcohol (70% or greater) on a paper towel and wipe thermal paste off. Some force may be required.
- Apply new thermal paste to CPU.

To reassemble your device, follow these instructions in reverse order.