



Toshiba Satellite M305D-S4829 CD/DVD Drive Replacement

Written By: Dozuki System



INTRODUCTION



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
 - [Plastic Opening Tools](#) (1)
-

Step 1 — Toshiba Satellite M305D-S4829 CD/DVD Drive Replacement



- Unlatch the battery by pushing outward on both latches.

Step 2




- Slide battery out.

Step 3



- Remove the back panel by removing the three labeled screws with a Phillips #0 screwdriver.

Step 4

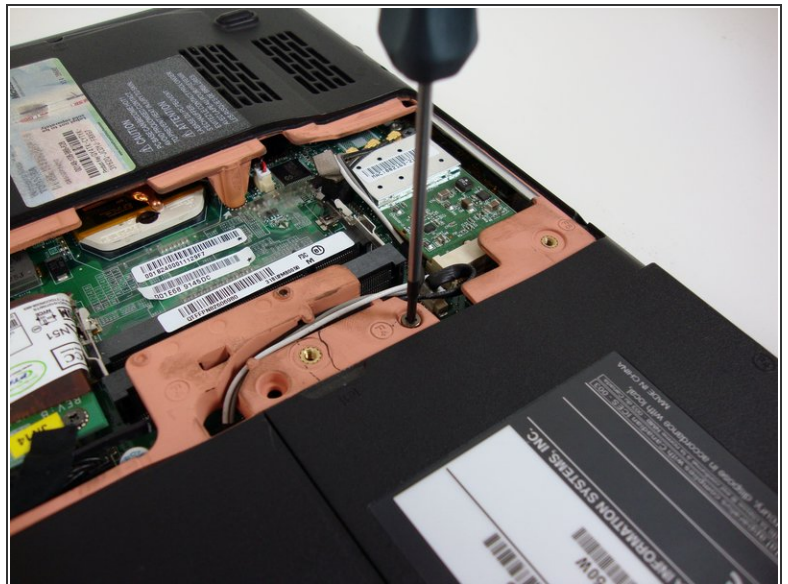

- Locate and remove the circled screw with a Phillips #0 screwdriver.

Step 5



- Use the plastic opening tool to pry the CD/DVD drive out of the frame.

Step 6



- Gently remove the CD/DVD drive from the laptop body.

To reassemble your device, follow these instructions in reverse order.