



Toshiba Satellite M305D-S4829 RAM Replacement

Written By: Dozuki System



INTRODUCTION



TOOLS:

- [Phillips #0 Screwdriver](#) (1)



PARTS:

 
 
- [PC2-6400 2 GB RAM Chip](#) (1)

Step 1 — Toshiba Satellite M305D-S4829 RAM Replacement



- Unscrew the three screws from the back panel with Phillips #0 screwdriver.
- Remove the back panel.

Step 2

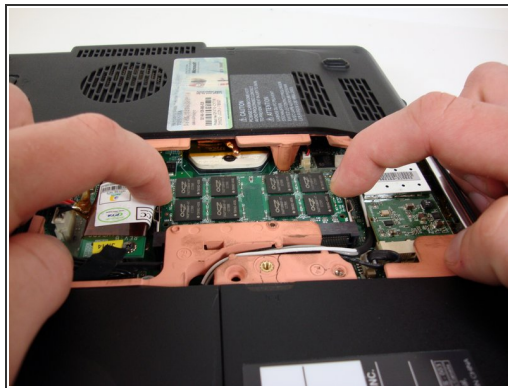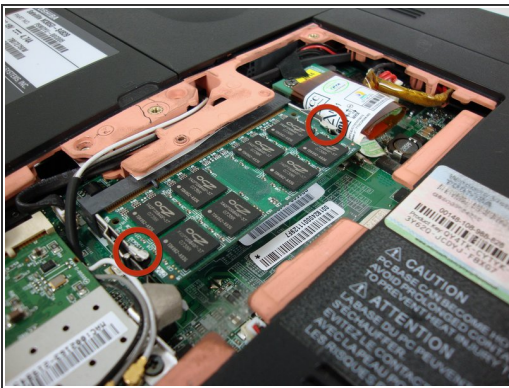


- Locate the two clips holding the RAM chip in place.
- Apply pressure to each clip, pulling them away from the RAM.
- ❗ One end of the RAM will pop out.

Step 3



- Gently pull RAM out as shown.

 Step 4

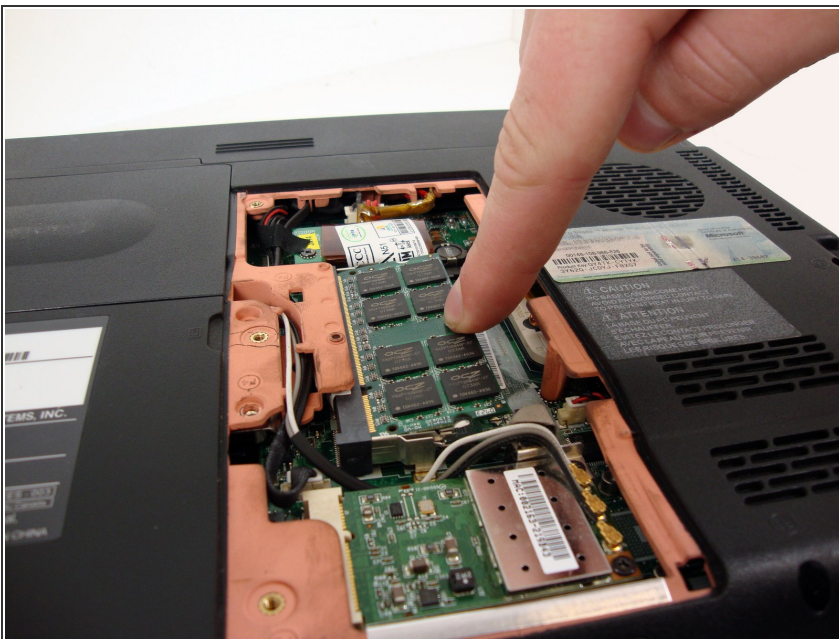

- To install a new stick of RAM, carefully insert it into the RAM slot.
- Gently push down on the RAM chip until it snaps securely into place.

To reassemble your device, follow these instructions in reverse order.