



Canon EOS 30 Front Panel Replacement

Written By: Dozuki System



INTRODUCTION

Removing the front panel is the first step to accessing many internal components. Removal is safe, simple, and only requires a screwdriver.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Canon EOS 30 Front Panel Replacement



- Remove two 4.8 mm black screws on the front of the camera.

Step 2



- Remove one 4.3 mm black screw under the lens ring and one 4.8 mm black screw on the bottom of the camera.

Step 3



- Remove one 4.8 mm black screw on the left side.

Step 4



- Remove the front panel by lifting out the side opposite the grip.

To reassemble your device, follow these instructions in reverse order.