



iPhone 5s SIM Card Replacement

Remove or replace the SIM card in an iPhone 5s.

Written By: Dozuki System



INTRODUCTION

Use this guide to remove or replace your GSM iPhone's SIM card and tray.



TOOLS:

- [SIM Card Eject Tool](#) (1)



PARTS:

- [iPhone 5s Nano SIM Card Tray](#) (1)

Step 1 — iPhone 5s SIM Card Replacement



- Insert a SIM card eject tool or a paperclip into the small hole in the SIM card tray.
- Press to eject the tray. This may require a significant amount of force.

Step 2



- Remove the SIM Card tray assembly from the iPhone.
- ☑ When reinserting the SIM card, ensure that it is in the proper orientation relative to the tray.

To reassemble your device, follow these instructions in reverse order.