



Disassembling Canon EOS Rebel XS Back Cover

Written By: Dozuki System



INTRODUCTION

Use this guide to replace a dysfunctional back cover.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Disassembling Canon EOS Rebel XS Back Cover



- Remove the two 4.5mm (.18in) long black screws from the side cover using a #00 Phillips screwdriver.

Step 2




- On the bottom, remove the last long screw with the Phillips Screwdriver.
- Use tweezers to lift the panel.

Step 3



- Remove the three long black screws from the bottom using a #00 Phillips screwdriver.
- Use tweezers to lift the panel.

Step 4

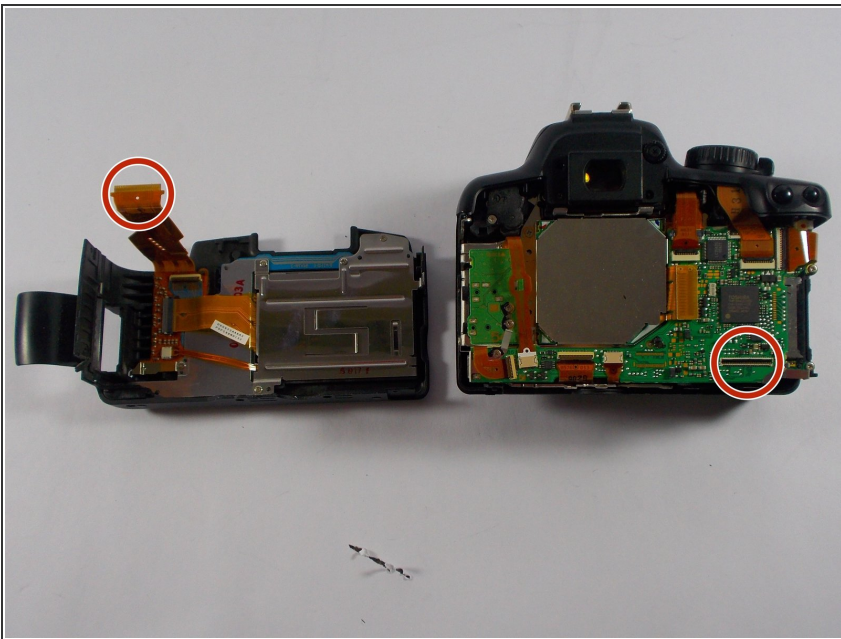

- Once you have detached the back cover, use a pair of tweezers to lightly pull on strap found connecting the back cover to the camera.

To reassemble your device, follow these instructions in reverse order.