




Disassembling Canon EOS Rebel XS Top Panel

Written By: Dozuki System

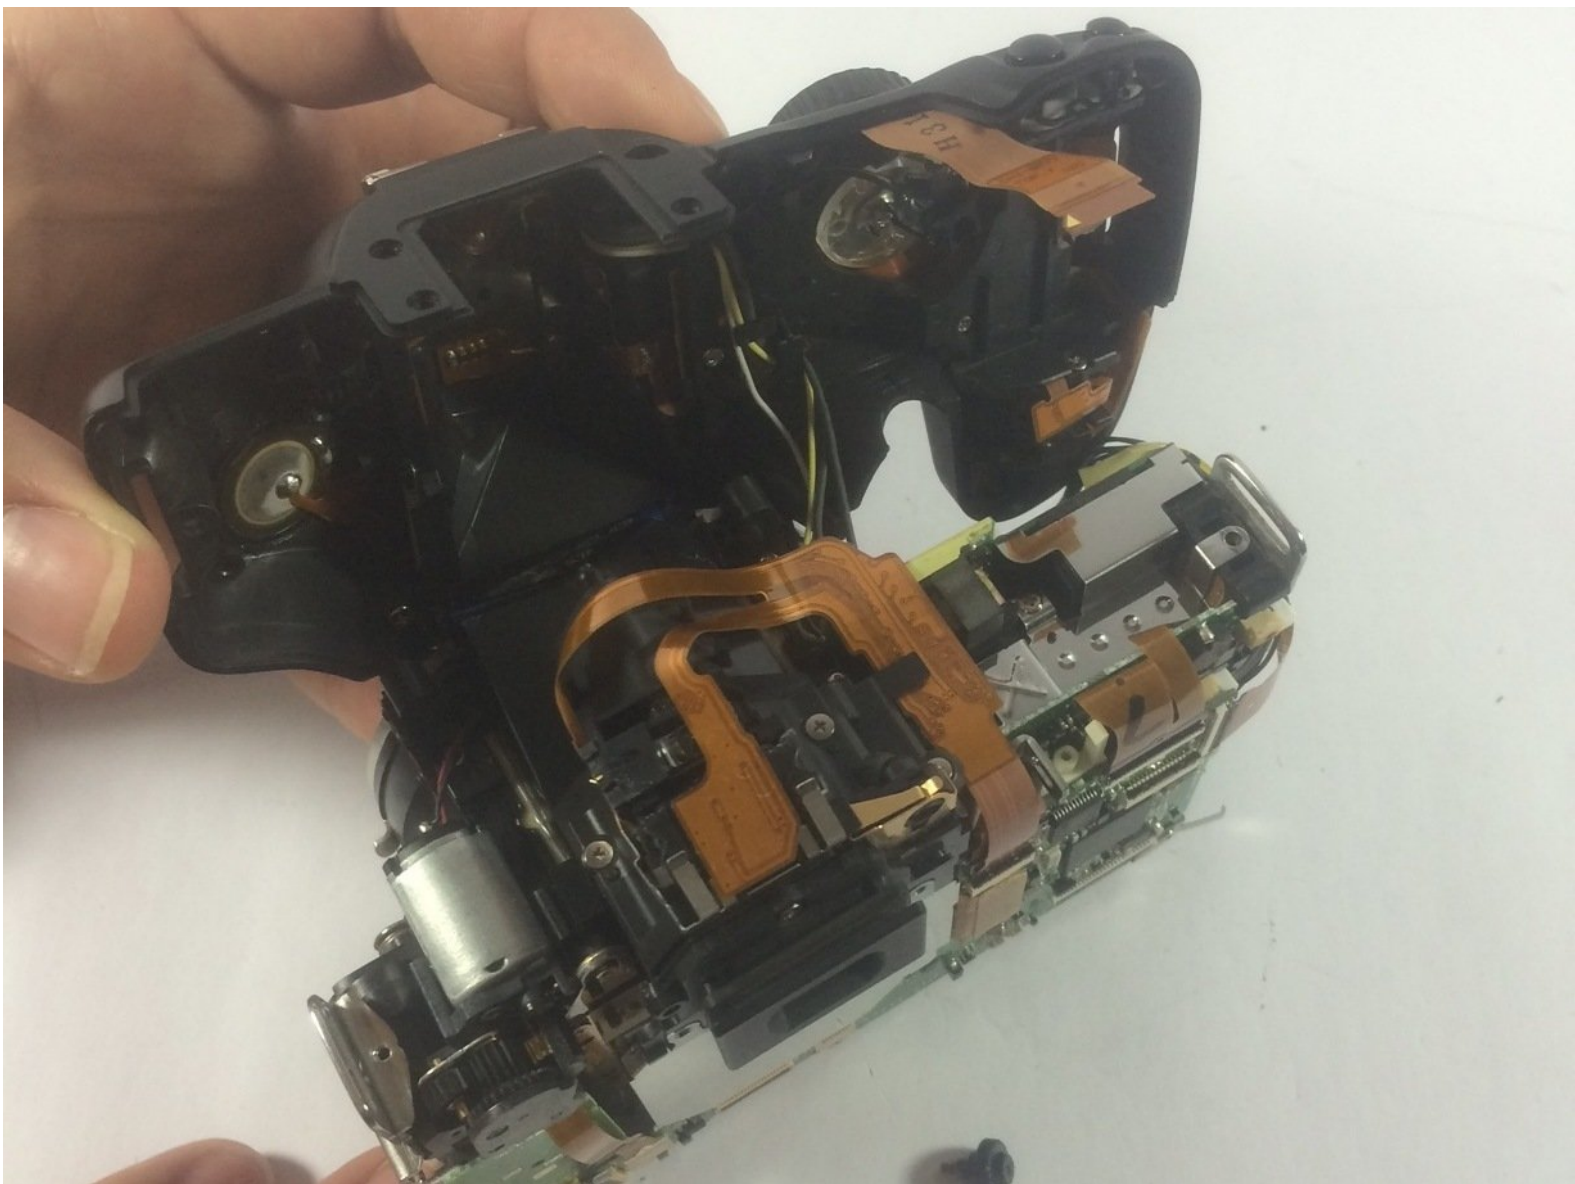

INTRODUCTION

Use this guide to remove the top panel of the camera.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [Spudger](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Disassembling Canon EOS Rebel XS Top Panel



- Remove the two 4.5mm (.18in) long black screws from the side cover using a #00 Phillips screwdriver.

Step 2



- On the bottom, remove the last long screw with the Phillips Screwdriver.
- Use tweezers to lift the panel.

Step 3



- Remove three medium length screws from the bottom of the camera

Step 4




- Remove the two medium length screws on the front panel of the camera above the lens mount.
- Once you done, you may use the Spudger to panel from non-grip side.
- ⓘ If you start on the grip side, it will be more challenging to loosen the panel.

Step 5




- Remove the three long black screws from the bottom using a #00 Phillips screwdriver.
- Use tweezers to lift the panel.

Step 6

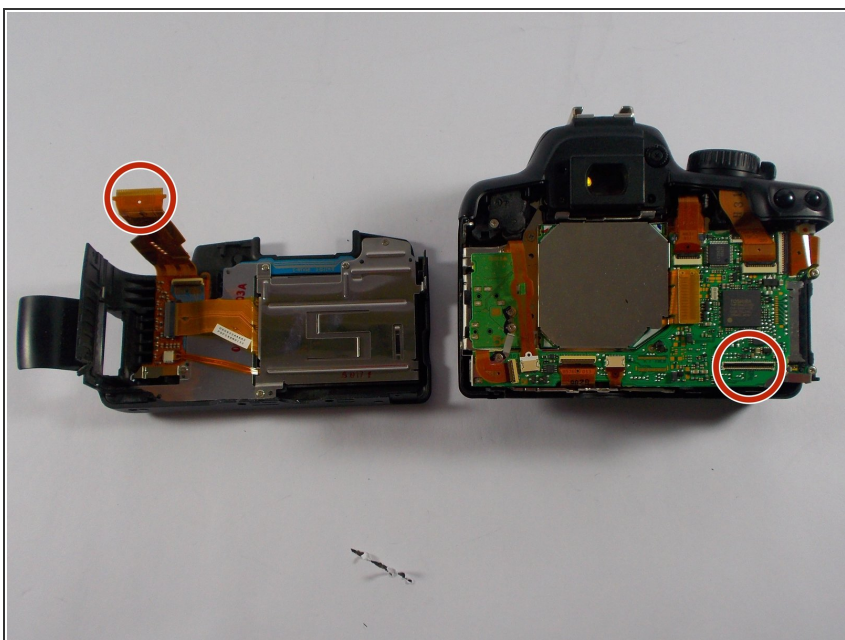


- Once you have detached the back cover, use a pair of tweezers to lightly pull on strap found connecting the back cover to the camera.

Step 7

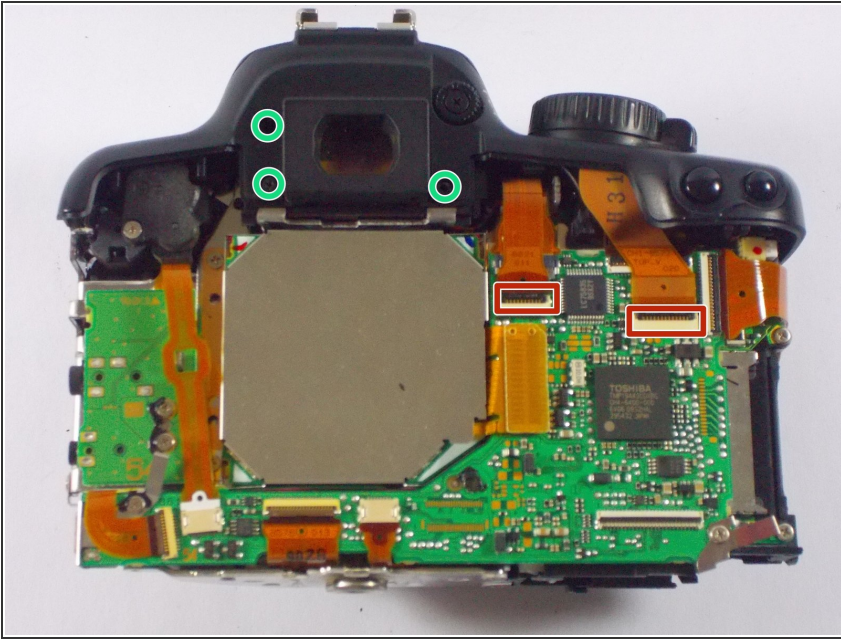


- Remove the following ribbons with the tweezers by gently pulling on them.
- Remove the three black screws, near the eye piece, using the Phillips Screwdriver.

Step 8

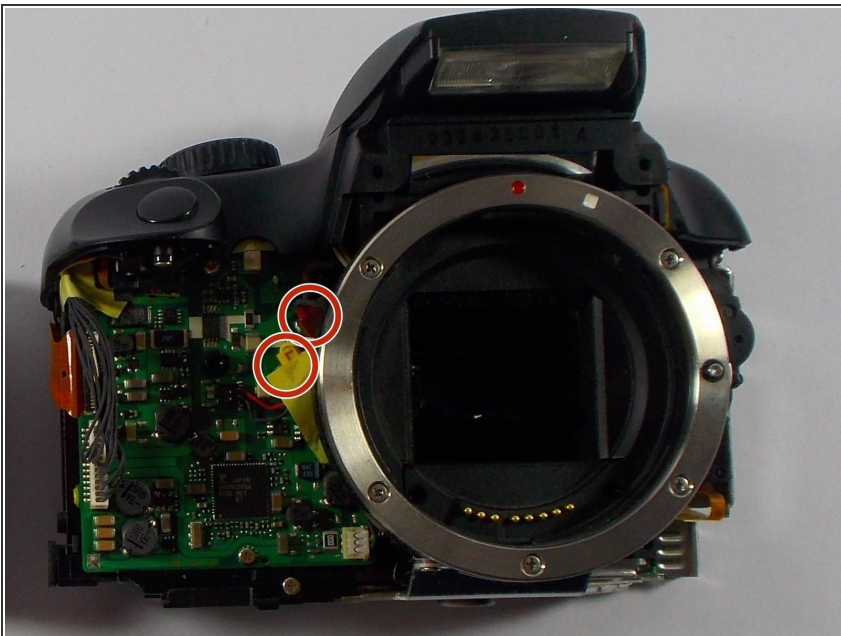

- Remove the cable heads attached on the front side of the camera next to the lens mount.
- ⚠ Be gentle when pulling wires loose, use the tweezers to remove the wires.

Step 9

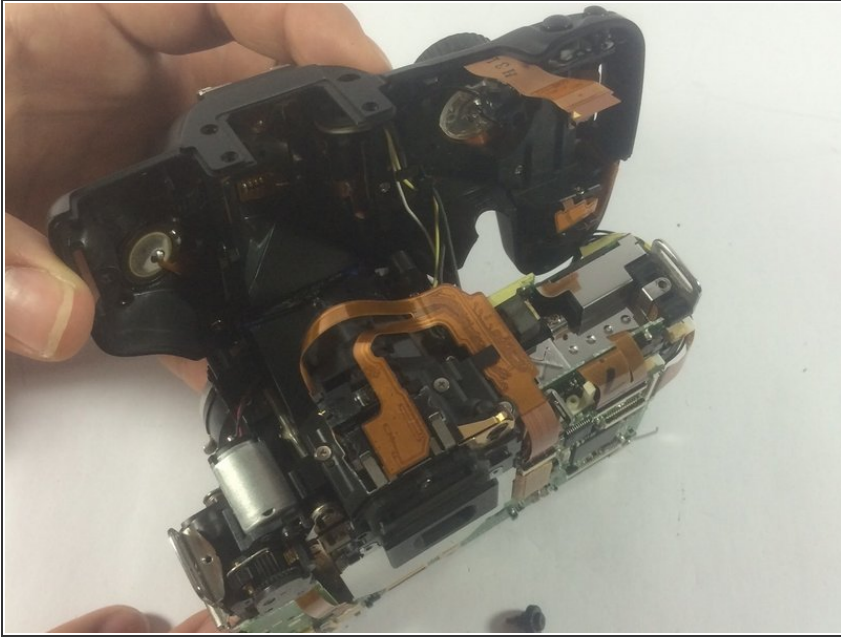

- You can use your fingers to pull the top panel of the camera.

To reassemble your device, follow these instructions in reverse order.