



Canon EOS Rebel XS Latch Side Cover Replacement

Written By: Dozuki System



INTRODUCTION

Use this guide to replace a cosmetically damaged latch side cover.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Canon EOS Rebel XS Latch Side Cover Replacement



- Remove the two 4.5mm (.18in) long black screws from the side cover using a #00 Phillips screwdriver.

Step 2



- On the bottom, remove the last long screw with the Phillips Screwdriver.
- Use tweezers to lift the panel.

To reassemble your device, follow these instructions in reverse order.