




Canon EOS Rebel XS LCD Replacement

Written By: Dozuki System

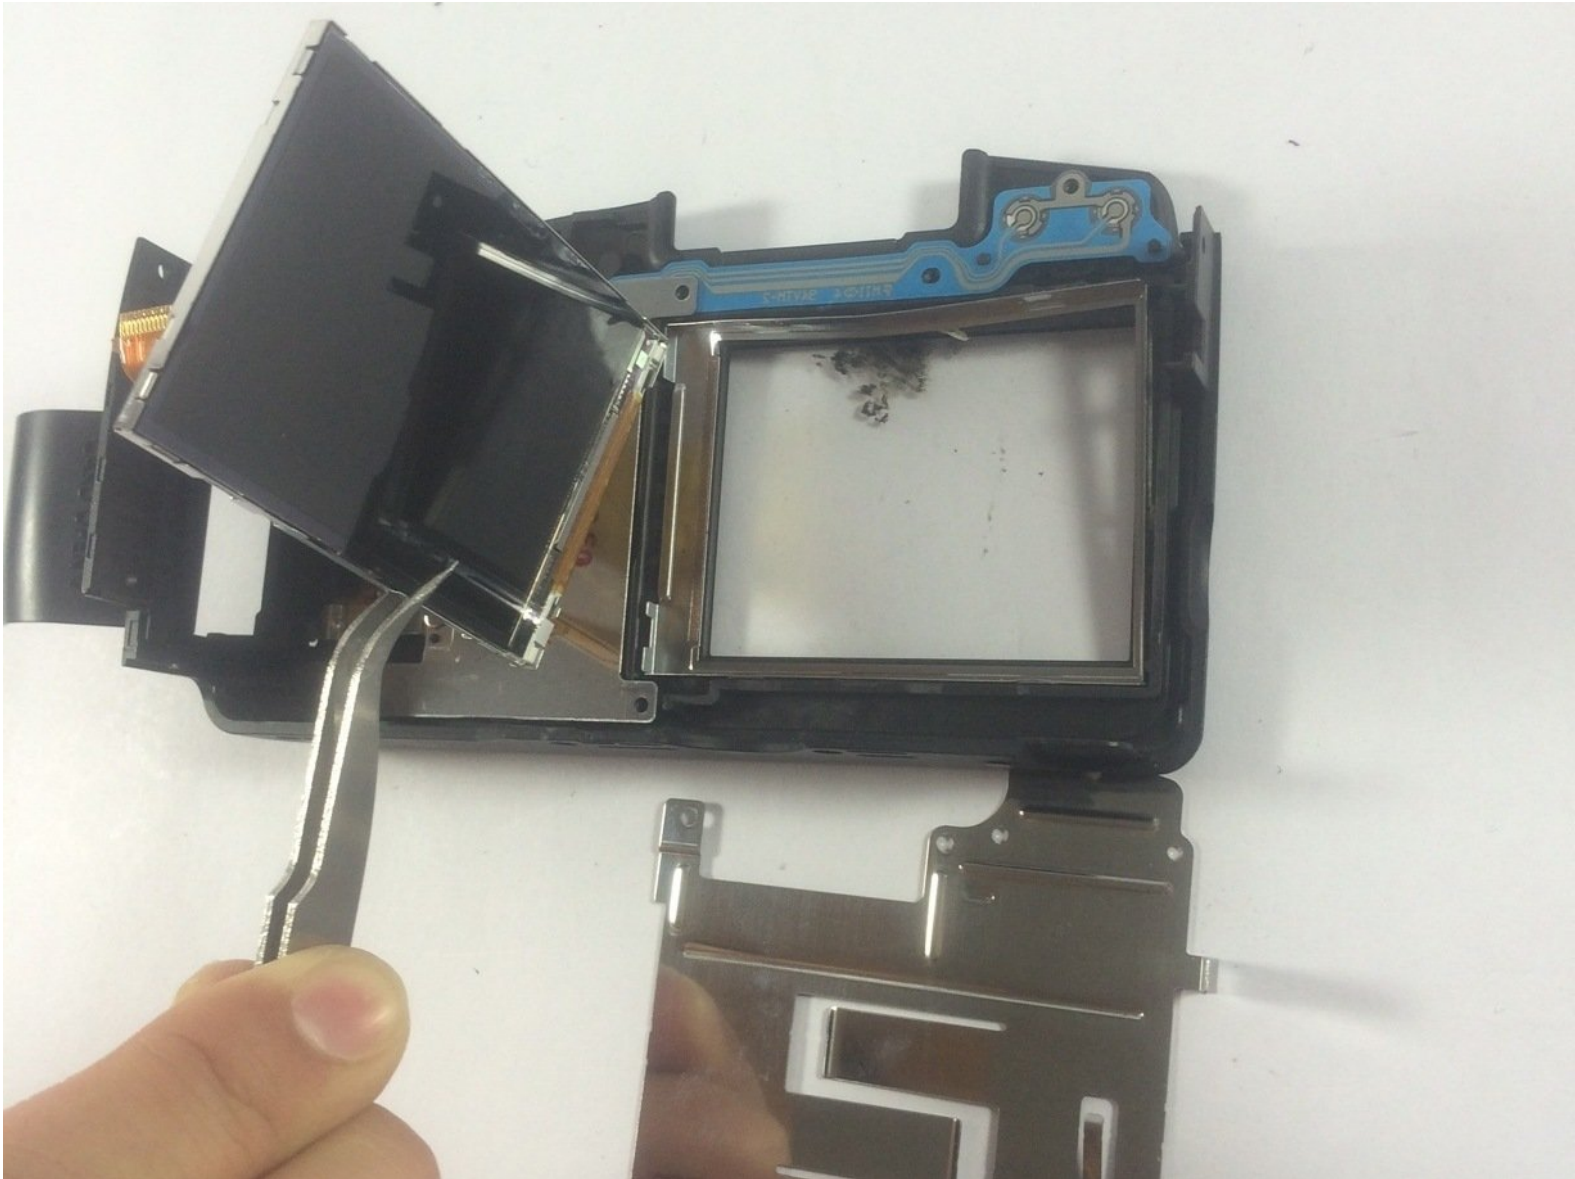

INTRODUCTION

Use this guide to replace the LCD. The LCD tends to fade after about five years.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [Spudger](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Canon EOS Rebel XS LCD Replacement



- Remove the two 4.5mm (.18in) long black screws from the side cover using a #00 Phillips screwdriver.

Step 2




- On the bottom, remove the last long screw with the Phillips Screwdriver.
- Use tweezers to lift the panel.

Step 3




- Remove the three long black screws from the bottom using a #00 Phillips screwdriver.
- Use tweezers to lift the panel.

Step 4

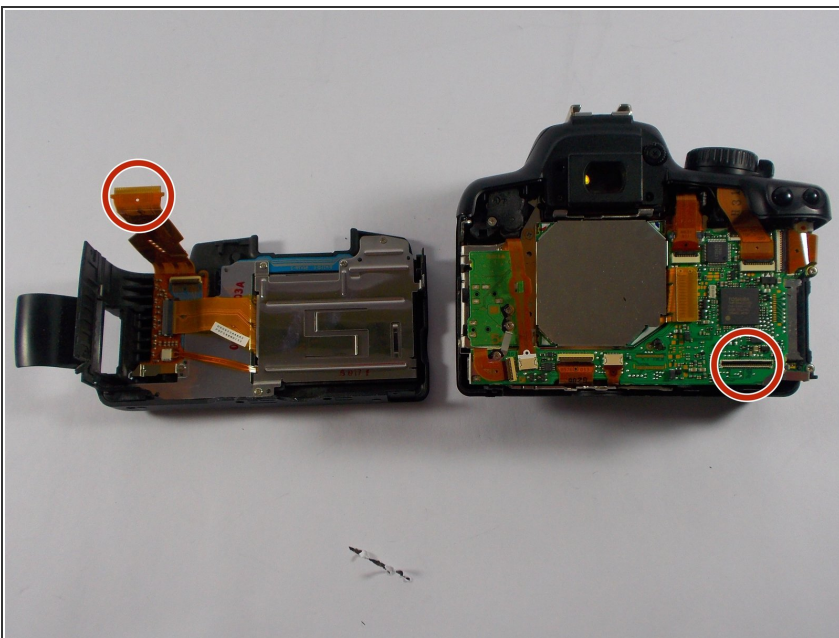


- Once you have detached the back cover, use a pair of tweezers to lightly pull on strap found connecting the back cover to the camera.

Step 5

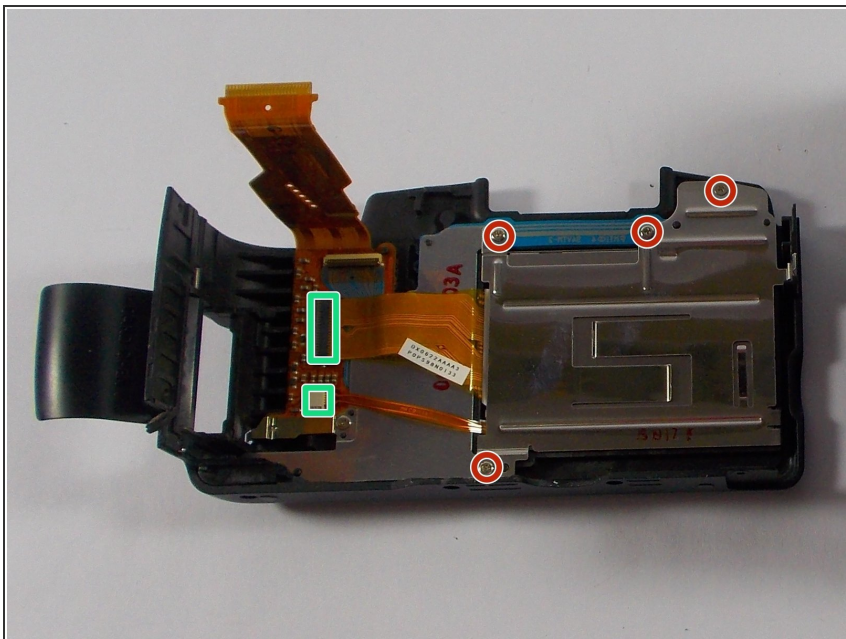

- Use the tweezers to gently remove the straps (in the teal box).
- Use the Phillips Screwdriver to remove the four screws (in the red dots).
- Use your fingers to remove the silver plate.

Step 6

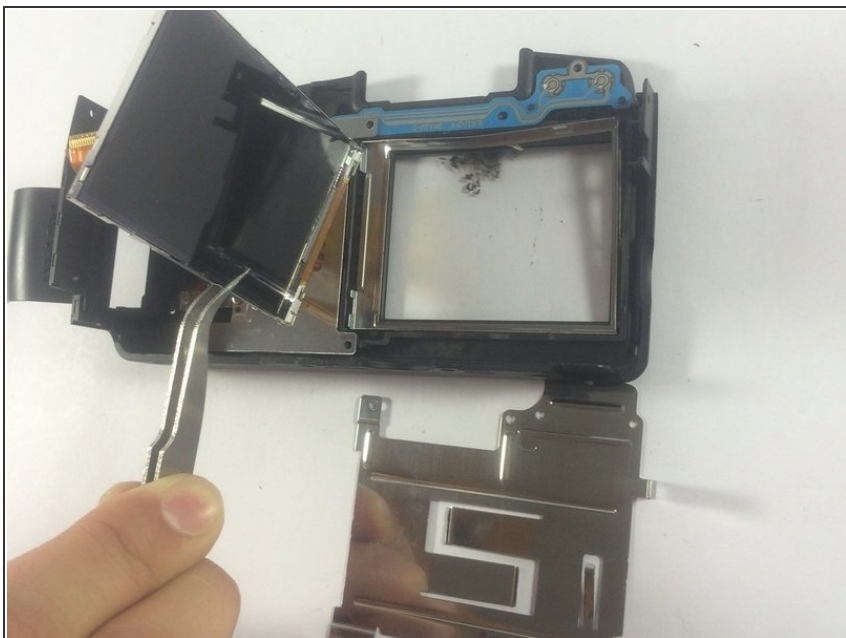

- Use the Spudger on the edges of the screen.
- Once one end is loose, use the tweezers to lift the screen.

To reassemble your device, follow these instructions in reverse order.