



Removing and Replacing Canon Optura 100MC Battery

Written By: Dozuki System



INTRODUCTION

Use this guide to learn how to remove and replace the battery.

Step 1 — Removing and Replacing Canon Optura 100MC Battery



- Orient the camera so that the back button panel and viewfinder are facing you.
- Push the "Battery Release" button to the side and hold.

Step 2



- While holding the battery release button to the side, slide the battery towards you, past the release button.

To put the battery back in, line up the edges and gently push it back into place until it clicks.