




Disassembling Canon PowerShot A590 IS Front Cover

Written By: Dozuki System

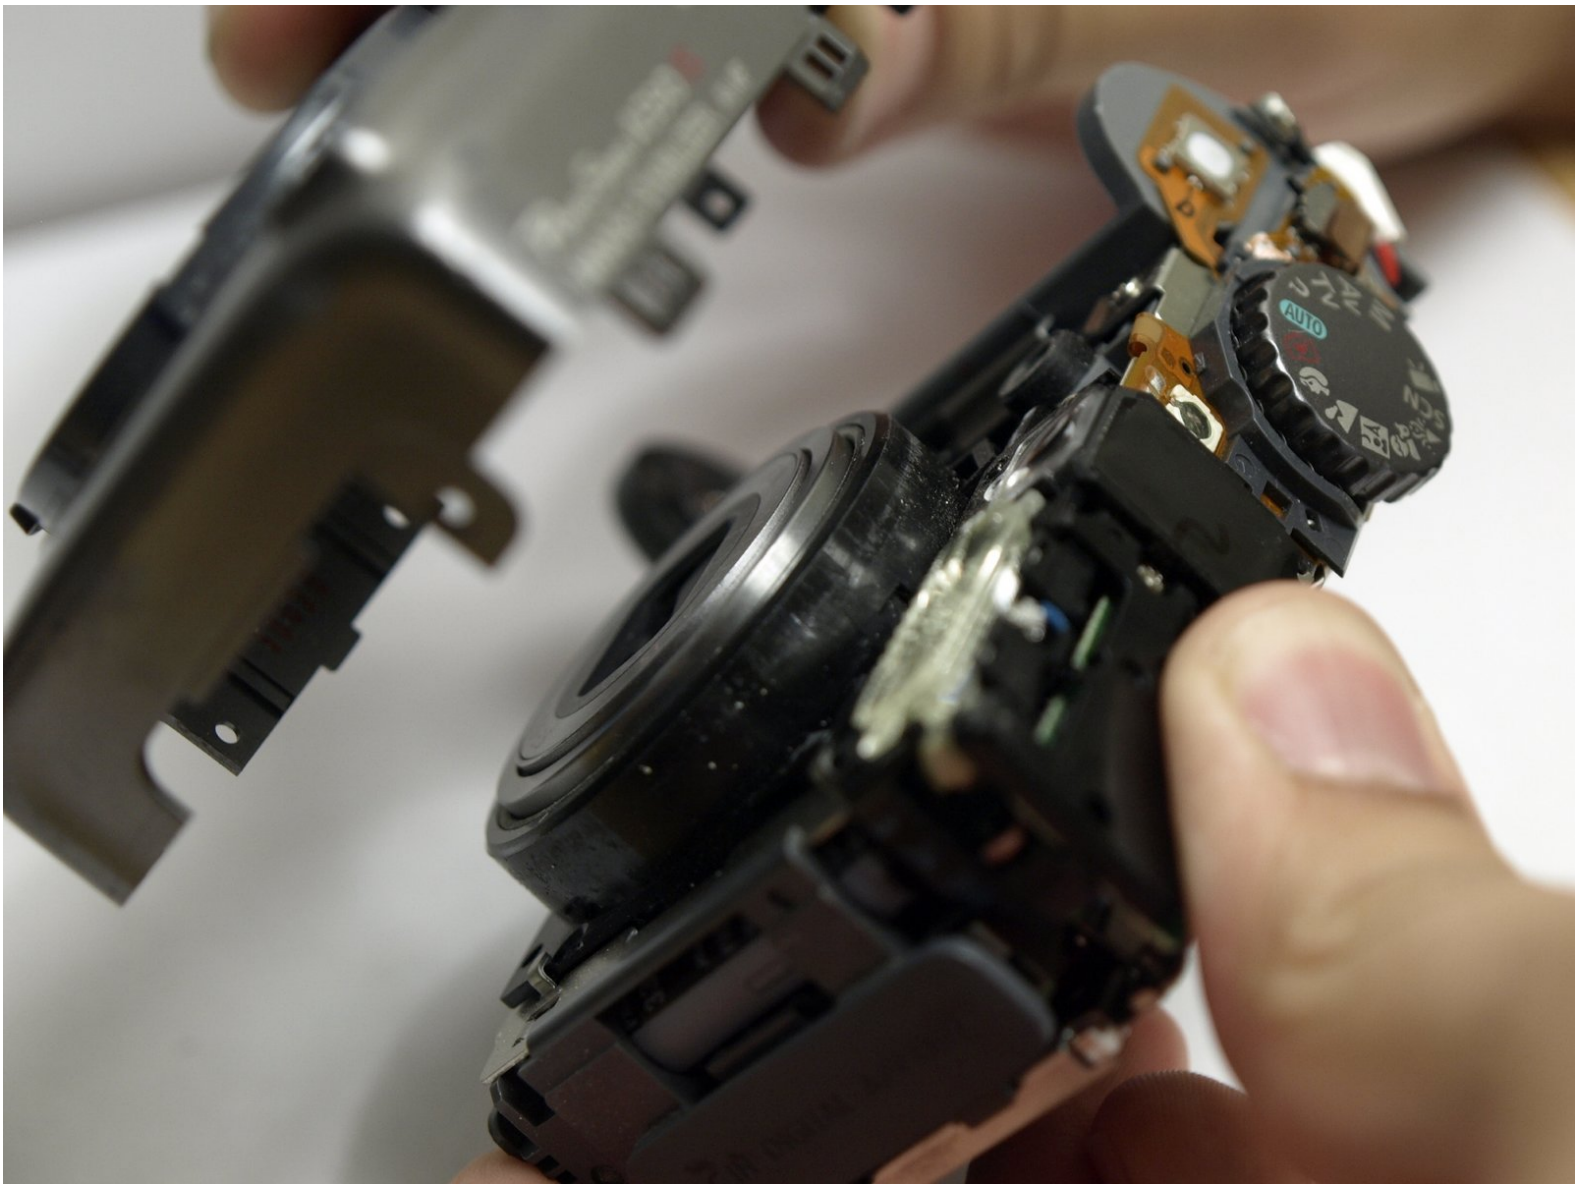

INTRODUCTION

This guide will instruct the user on how to remove the front cover of the Canon A590 IS.

TOOLS:


- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Locate and Open Battery Hatch



- The battery hatch is on the bottom of the camera.
- ⚠ **CAUTION:** Locate the switch to open the hatch and push gently toward the front of the camera. Too much force can break the hatch.
- While the switch is pushed forward, pull the cover away from the camera.

Step 2 — Locate and Remove Camera Batteries

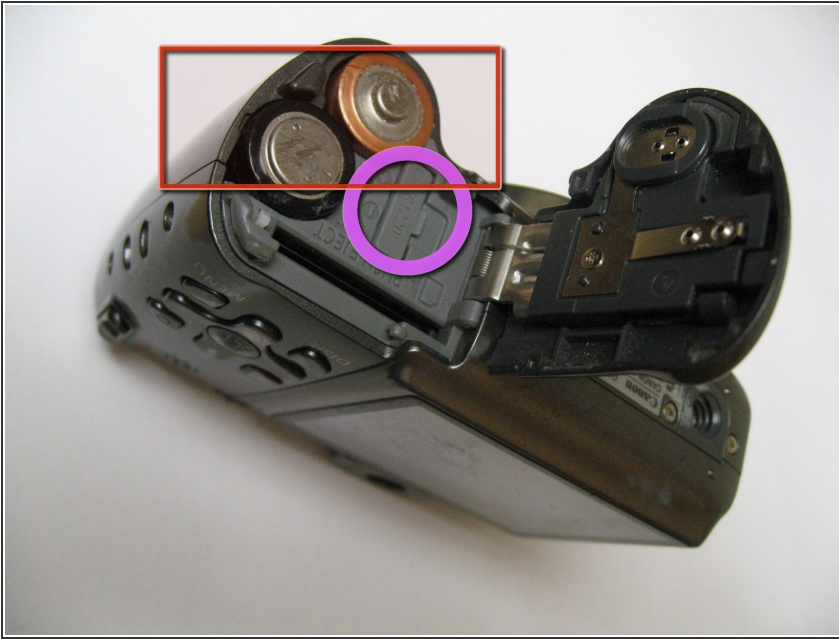

- This camera requires AA batteries. To remove batteries, simply allow them to fall out of the camera.
- The clock battery cover is shown here in the purple circle. Use a fingernail to lift the battery out of the camera.

Step 3 — Replacing Camera Batteries



- When replacing the AA batteries, verify they are oriented correctly by following the (+) and (-) signs on the camera.

Step 4 — Remove Screw Near AV Port



- Remove the screw located under the rubber flap on the left side of the camera using a magnetic screwdriver.

Step 5 — Remove Side Screws




- Remove the two screws located on the other side of the camera using a magnetic screwdriver

Step 6 — Remove Bottom Screws



- Remove the three screws located at the bottom of the camera using a magnetic screwdriver.

Step 7 — Remove Back Cover

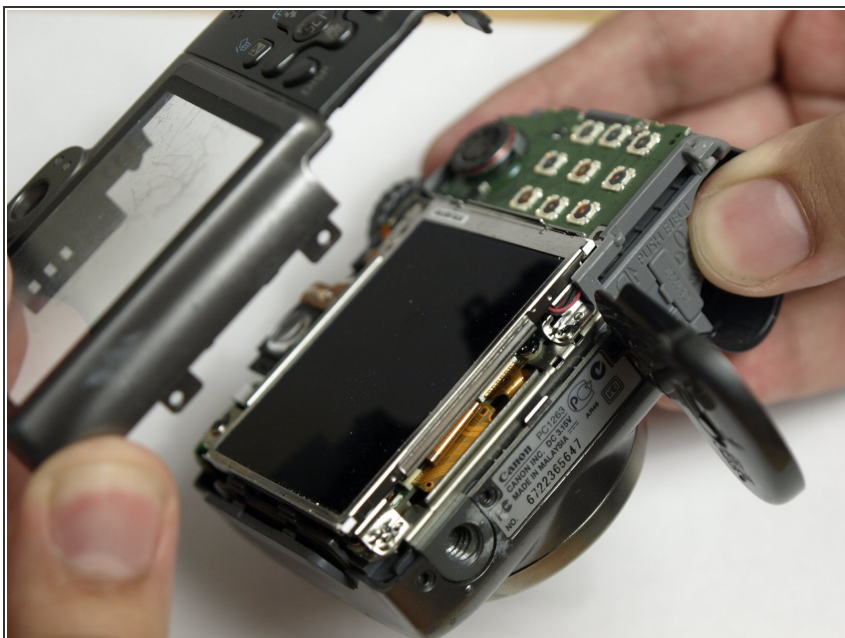


- Open the battery cover.
- Using the iPod tool, push up gently around all edges of the camera.

Step 8 — Remove Lens Cover



- Press and hold down the button shown in the blue circle.
- While pressing the button, rotate the lens cover in a counter-clockwise direction to remove it.

Step 9 — Remove Front Cover

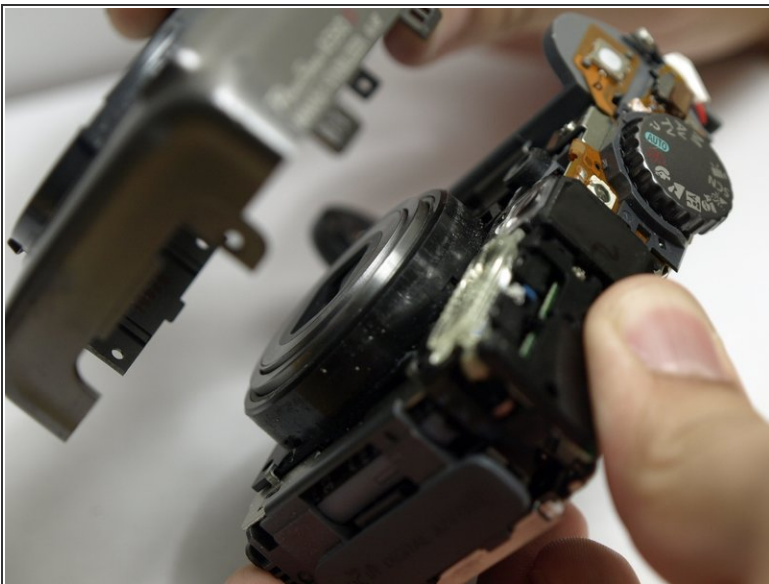

- Remove the front cover of the camera.

ⓘ This may require a bit of force.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2020-11-14 02:08:27 AM (MST).

