



# Canon PowerShot S230 Memory Card Replacement

Written By: Dozuki System



# INTRODUCTION

This guide will show you how to remove the CompactFlash memory card.

## Step 1 — Canon PowerShot S230 Memory Card Replacement



- Locate the sliding button labeled "CF open" on the back of the camera.
- Press and slide down the button labeled "CF open". The memory card cover will pop open.

## Step 2



- Push down on the black square button next to the memory card slot. This will release the memory card from the slot.



## Step 3



- Pull the memory card out of the memory card slot.

To reassemble your device, follow these instructions in reverse order.