




Canon PowerShot S400 Shutter Button Assembly Replacement

Written By: Dozuki System

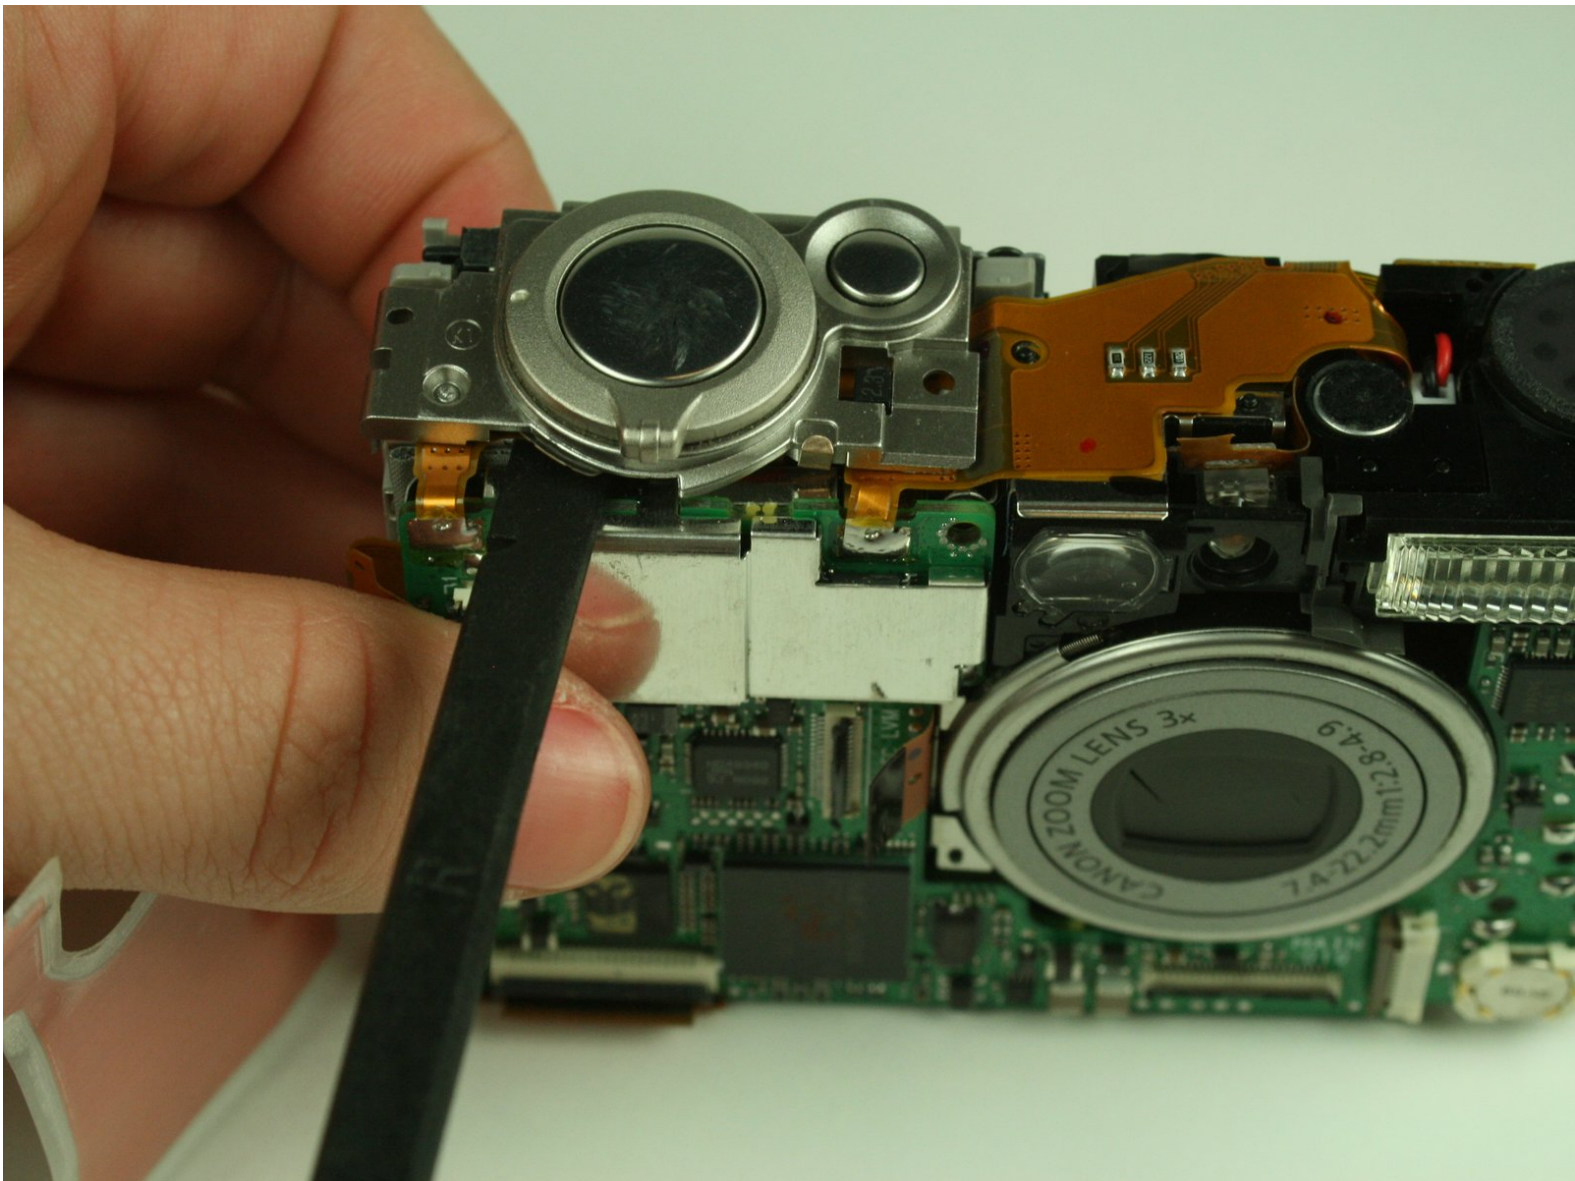

INTRODUCTION

This guide provides instructions on how to replace the shutter button assembly on the Canon PowerShot S400.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [Spudger](#) (1)
-


Step 1 — Canon PowerShot S400 Shutter Button Assembly Replacement



 Unless otherwise stated, a #00 philips screwdriver will be used to remove screws.

- Remove the 4.75mm screw located in the top right corner of the backside of the camera.
- Remove the four # screws located on the bottom of the camera.


Step 2

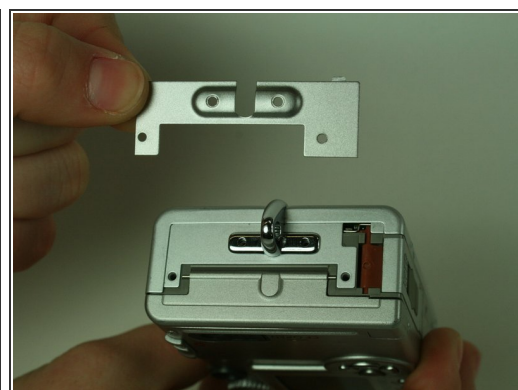

- Remove the two screws located on the right side of the camera. (the side with the USB adaption plug)
- Remove the four screws on the left side of the camera.
- This will release a small metal plate. Remove this plate.


Step 3



 There is a small black plastic piece that sits above the lens underneath the camera case. This plastic piece may fall out when you remove the cases; recover the piece and save it.

- Now separate the front and back camera casings.

Step 4

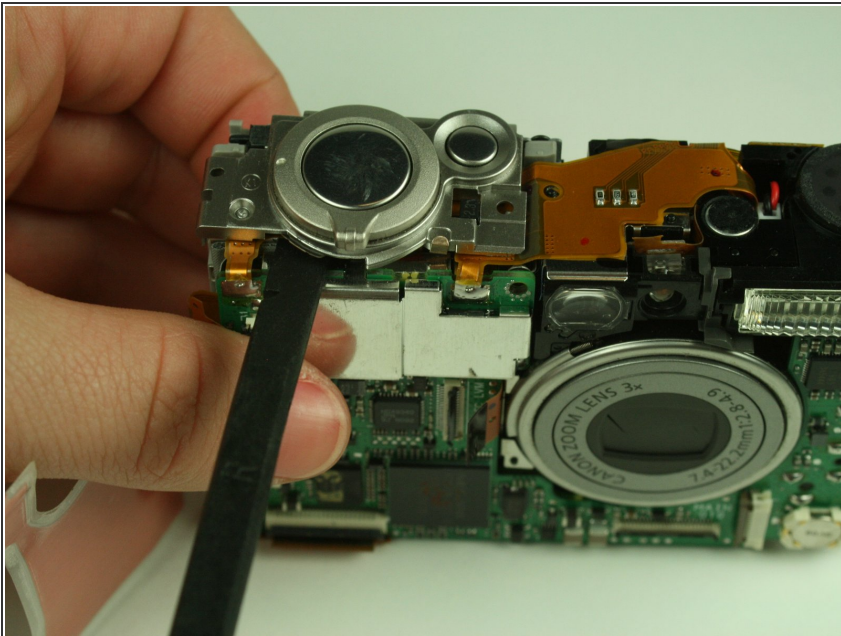

- Using a spudger, carefully pry the shutter button assembly from the camera.
- Install the replacement shutter button assembly.

To reassemble your device, follow these instructions in reverse order.