



Canon PowerShot S410 Battery Replacement

Written By: Dozuki System



INTRODUCTION


This guide demonstrates how to remove and replace the battery pack.

Step 1 — Canon PowerShot S410 Battery Replacement




- i** Turn the camera with the bottom side facing up.
- Locate the panel labeled "Batt. Open"
 - Place your finger on the panel and slide it in the direction of the arrow.
 - The slot will swing open revealing the battery pack.

Step 2

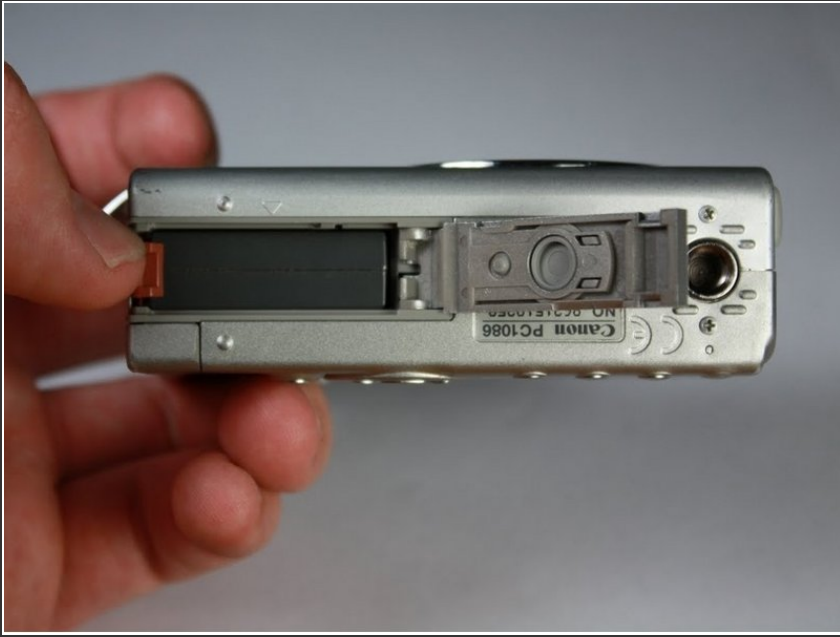

- ❗ Rotate the camera so that the slot is horizontal.
- Pull the orange lever and the battery will spring out slightly.

Step 3

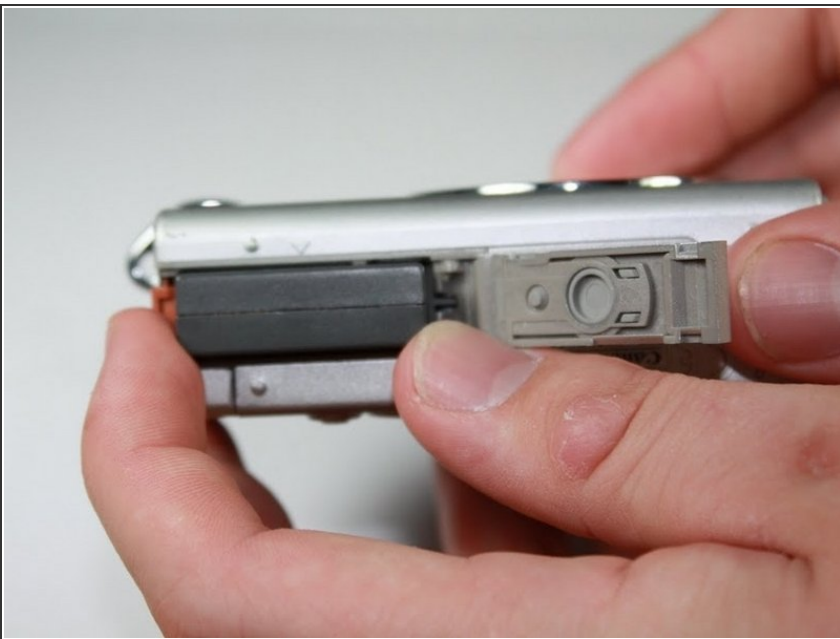

- Grasp battery and fully pull out of slot
- ❗ When placing the new battery back in the slot, the arrow on the battery must align with the arrow on the camera.

After a new battery has been inserted, close the swinging door and you're done.