



Canon PowerShot S410 Back Cover Replacement

Written By: Dozuki System



INTRODUCTION

This guide demonstrates how to remove the cameras back panel for cleaning or replacement.



TOOLS:


- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Canon PowerShot S410 Back Cover Replacement




- ❗ Turn the camera with the bottom side facing up.
- Locate the panel labeled "Batt. Open"
- Place your finger on the panel and slide it in the direction of the arrow.
- The slot will swing open revealing the battery pack.

Step 2

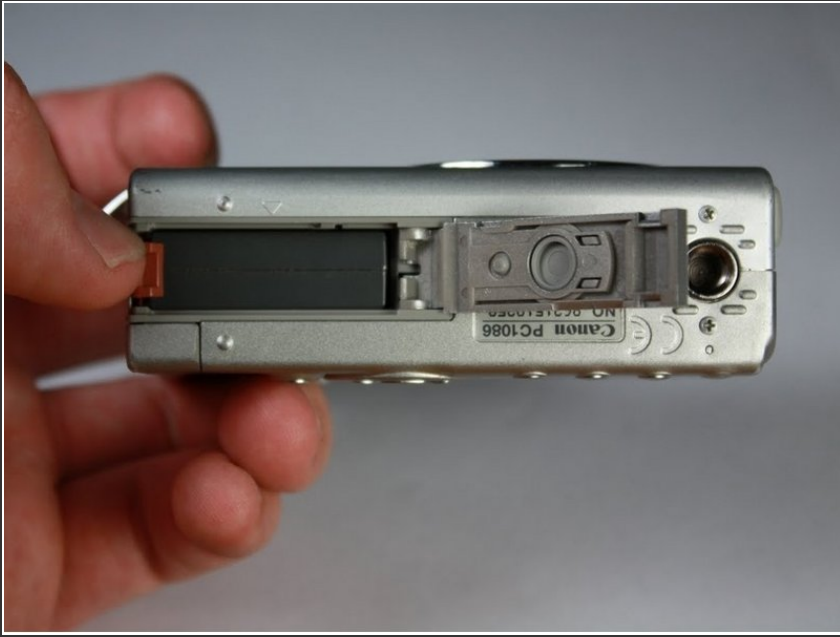

- ❗ Rotate the camera so that the slot is horizontal.
- Pull the orange lever and the battery will spring out slightly.

Step 3

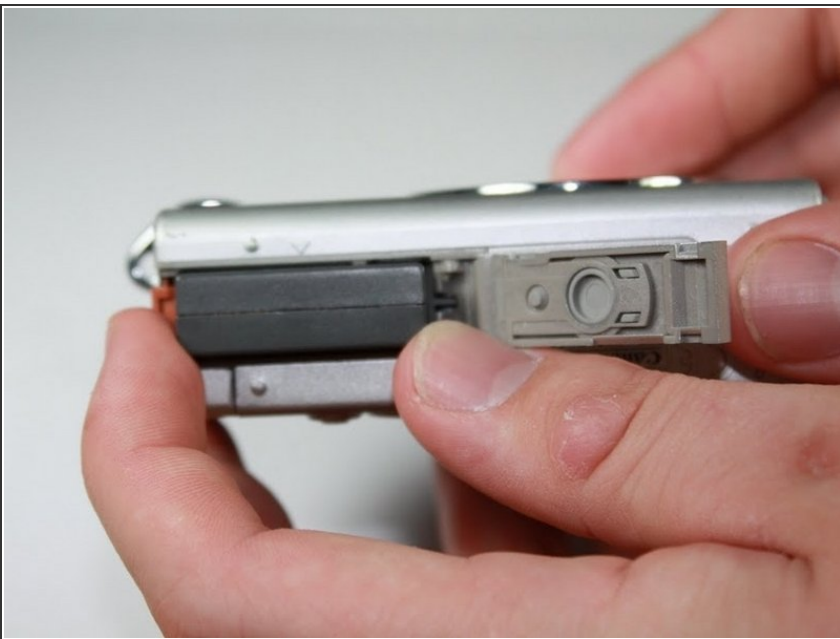

- Grasp battery and fully pull out of slot
- ❗ When placing the new battery back in the slot, the arrow on the battery must align with the arrow on the camera.

Step 4



- ① Start by laying the camera flat with the LCD screen facing up.
- Remove the 3.8mm screw in the upper right corner.

Step 5



- ① Position the camera with the bottom facing up.
- Remove the 4.8mm screw.
- Remove the two 2.3mm screws.

Step 6



- ① Position the camera so that the rubber "AV Out Digital" tab is facing upward.
- Slide this rubber tab out of the way to reveal the bottom screw.
- Remove the two 3.7mm screws.

Step 7



- ① Turn the camera with the back side facing you.
- Grip the edges of the back plate, and carefully slide it off.
- ⚠ If there is any resistance in movement, double check there are no screws left in the chassis.

To reassemble your device, follow these instructions in reverse order.