

# Canon PowerShot S410 Front Cover Replacement

Written By: Dozuki System



# **INTRODUCTION**

This guide shows you how to remove and replace the front cover of the camera.



# **TOOLS:**

• Phillips #0 Screwdriver (1)

# **Step 1 — Canon PowerShot S410 Front Cover Replacement**





- (i) Turn the camera with the bottom side facing up.
- Locate the panel labeled "Batt. Open"
- Place your finger on the panel and slide it in the direction of the arrow.
- The slot will swing open revealing the battery pack.



- (i) Rotate the camera so that the slot is horizontal.
  - Pull the orange lever and the battery will spring out slightly.



- Grasp battery and fully pull out of slot
- in the slot, the arrow on the battery must align with the arrow on the camera.



- (i) Start by laying the camera flat with the LCD screen facing up.
- Remove the 3.8mm screw in the upper right corner.



- Position the camera with the bottom facing up.
  - Remove the 4.8mm screw.
- Remove the two 2.3mm screws.





- (i) Position the camera so that the rubber "AV Out Digital" tab is facing upward.
- Slide this rubber tab out of the way to reveal the bottom screw.
- Remove the two 3.7mm screws.



- Turn the camera with the back side facing you.
- Grip the edges of the back plate, and carefully slide it off.
- If there is any resistance in movement, double check there are no screws left in the chassis.





- (i) Orientate the camera as in the picture.
- Remove the two 2.3mm outer screws.
- Remove the two 3.8mm screws near the strap bracket.
- Remove small panel covering mounting bracket.
- Remove door covering memory card.



- (i) Rotate the camera so that the bottom side is facing you.
- Remove the 3.8mm screw below the mounting bracket.

#### Step 10



- Rotate the camera so that the front is facing you.
- Grasp sides of front cover and carefully pull the front panel off of the camera.

To reassemble your device, follow these instructions in reverse order.