



# Disassembling Canon Powershot SD880 Menu Button

Written By: Dozuki System



---

## INTRODUCTION

 
This may need to be removed if the button or scroll wheel is not working.



### TOOLS:


- [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Disassembling Canon Powershot SD880 Menu Button

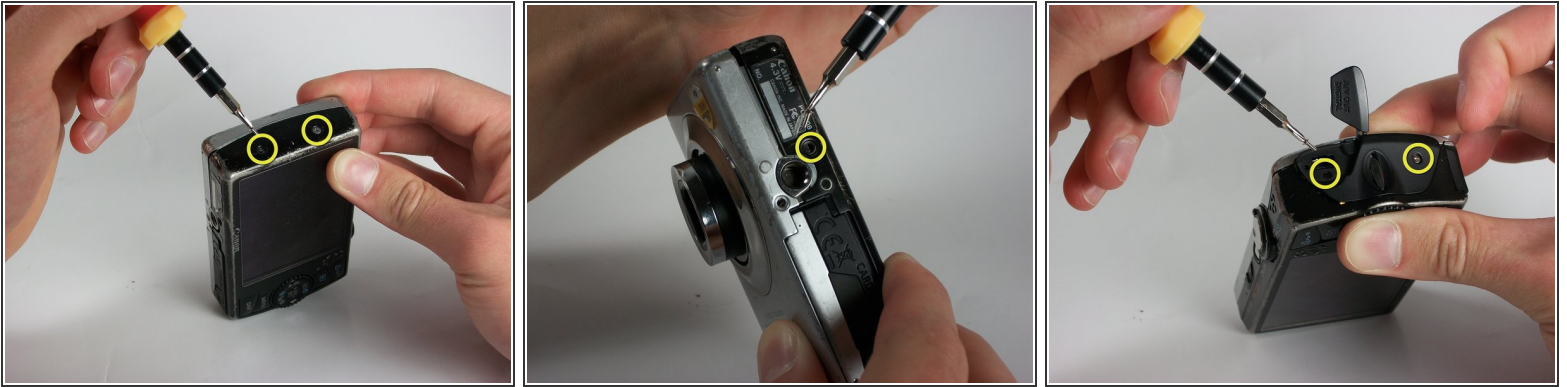

- Remove the 2 screws(2.41mm long) on the side of the camera next to the LCD screen.
- Remove the 2 screws(4.08mm) on the other side. One is located under the rubber USB flap.
- Remove the last screw(2.59mm) located on the bottom of the camera.
- Slowly pull the back cover of the camera.

## Step 2

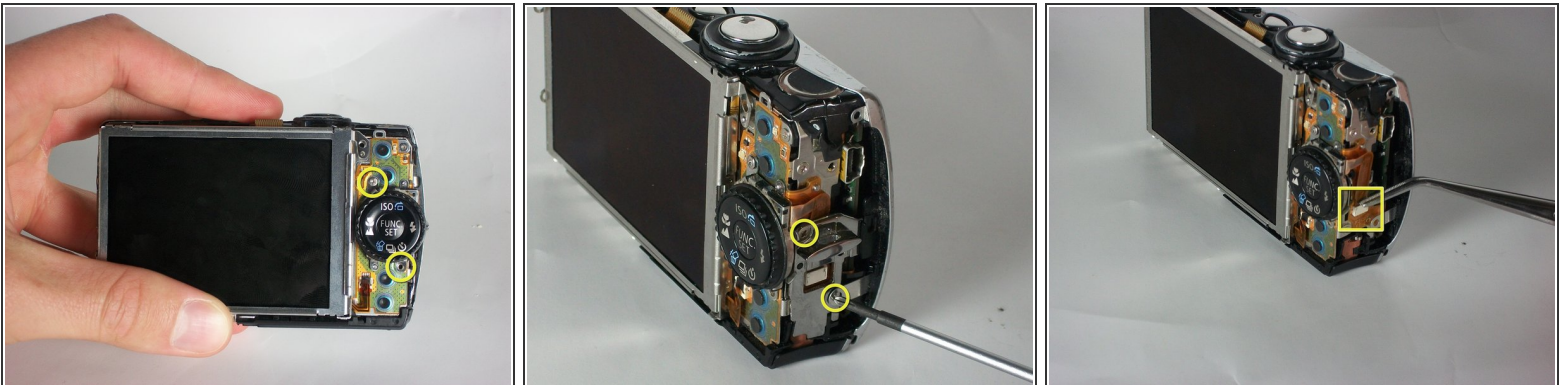 

- Remove 2 screws from back of camera using screwdriver.
- Remove 2 screws holding metal side guard using screwdriver.
- Remove the connecting ribbon by pulling it straight out.

To reassemble your device, follow these instructions in reverse order.