



# Canon Powershot SD880 Batteries/Memory Card Replacement

Written By: Dozuki System



---

## INTRODUCTION

The battery will need to be recharged or replaced after it runs out of power. The memory card should be replaced, too, once its storage is full.

---

### **TOOLS:**

- [Spudger](#) (1)
-

## Step 1 — Canon Powershot SD880 Batteries/Memory Card Replacement



- Locate the battery cover at the bottom of the camera.
- Slide the cover in the direction away from the lens.
- The cover should pop up, revealing the slot where the batteries and the memory card are inserted.

To reassemble your device, follow these instructions in reverse order.