




Game Boy Advance Speakers Replacement

Written By: Dozuki System

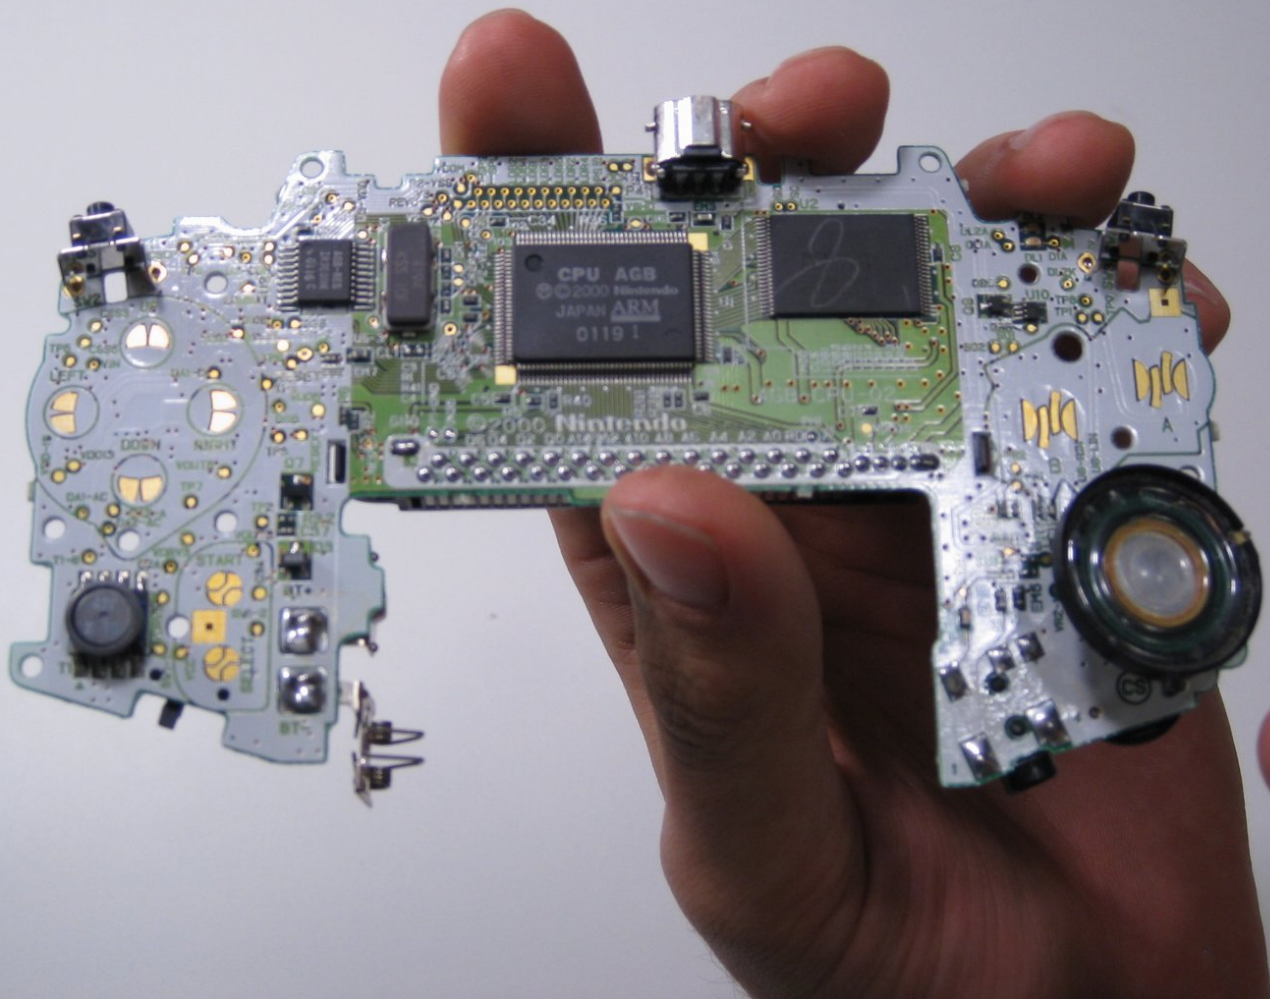

INTRODUCTION

Use this repair guide in order to replace the speakers.



TOOLS:

- [Desoldering Braid](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
 - [Solder](#) (1)
 - [Soldering Station](#) (1)
 - [Tri-point Y0 Screwdriver](#) (1)
-

Step 1 — Game Boy Advance Speakers Replacement



- Take the battery cover off by releasing the locking tab and hinging the cover away.

Step 2




- Remove the six back panel screws using a Tri-wing Screwdriver.

Step 3





- Remove bottom back panel screw with a Phillips #1 screw driver.

Step 4

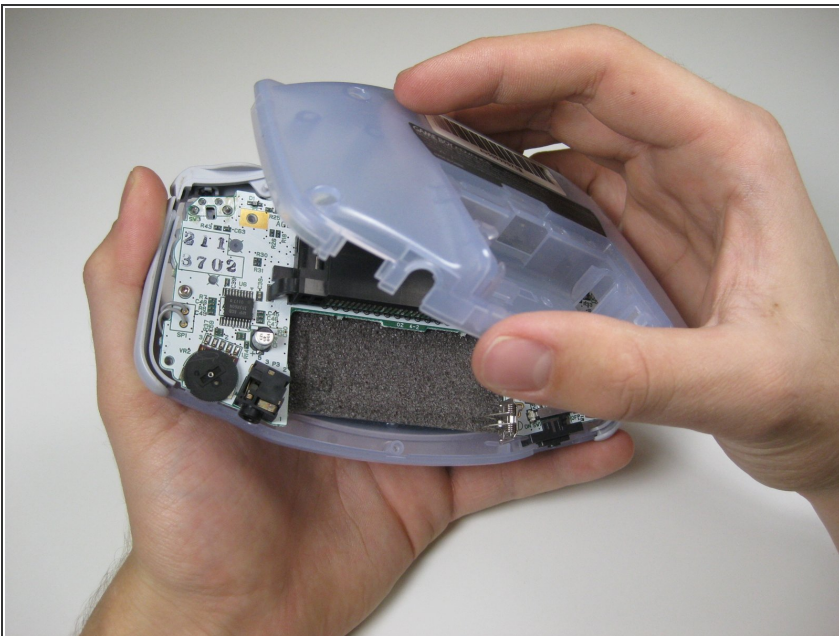


- Remove the back panel by pulling away with one hand and the front secured in the other hand.
- ⚠ Removal of the back panel may cause shoulder buttons and side panels to come loose and fall off.

Step 5

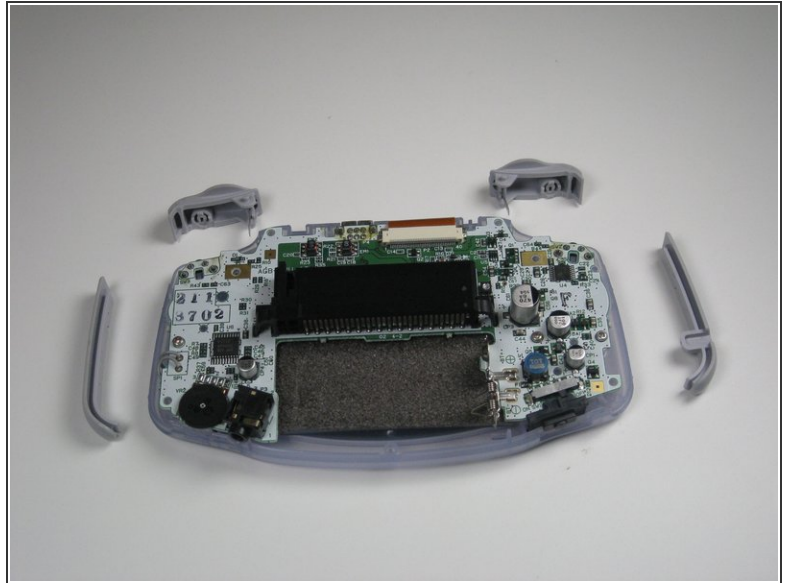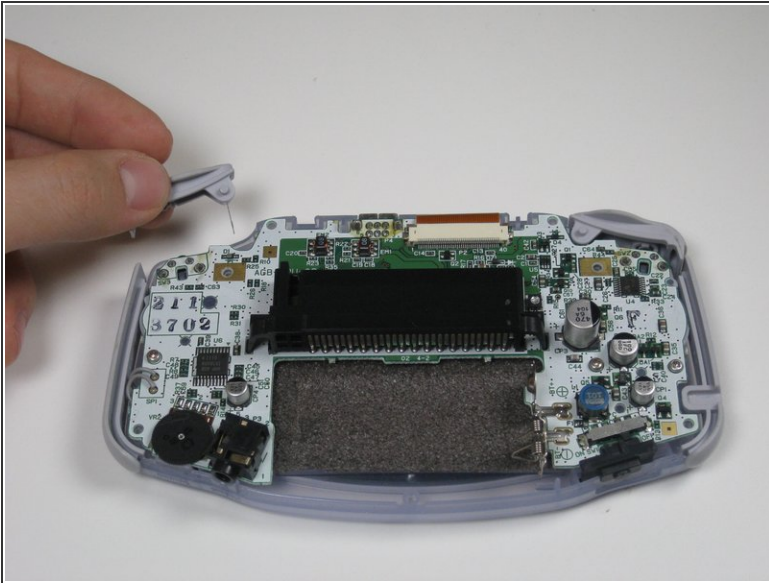


- Remove left and right triggers by lifting and pulling them away from the system.
- Do the same for side panels
- ❗ For finicky or jammed triggers only. Adjust and correct triggers and reassemble. Most jammed triggers are caused by buttons misplaced or jammed in its enclosure.

Step 6

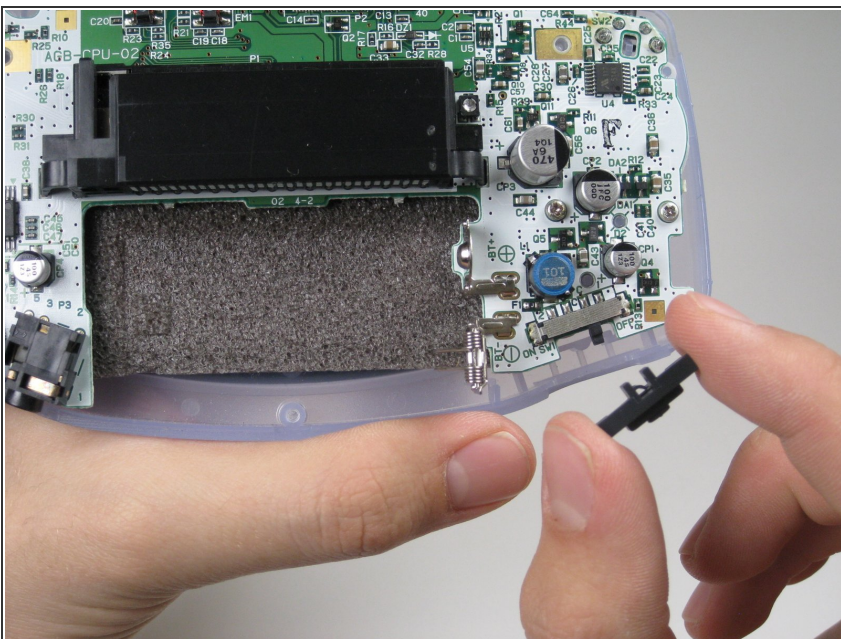


- Remove the gray On/Off Switch by pulling up and away from the unit. Replace with another switch if necessary.

Step 7

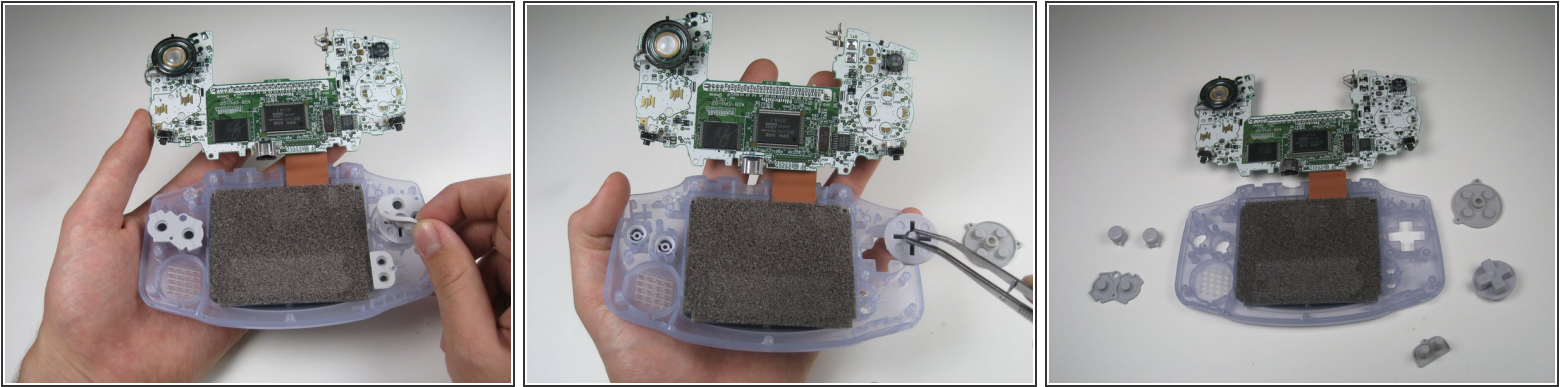


- Remove the rubber button pads from their pockets.
- Remove the plastic buttons and the D-pad from beneath the rubber pads with tweezers or by hand.

Step 8

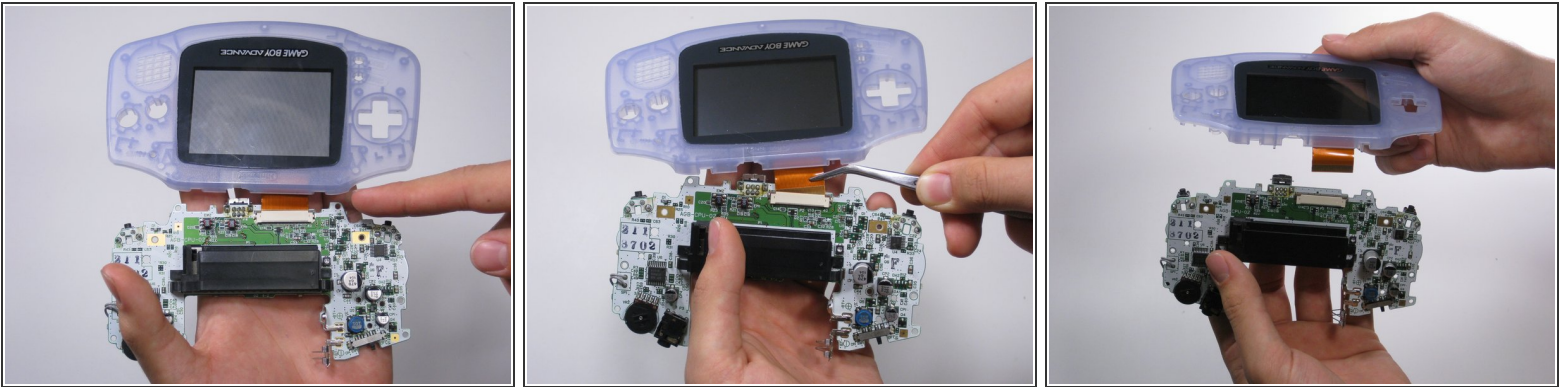

- Using the tweezers, gently pull the ribbon from the logic board.

Step 9

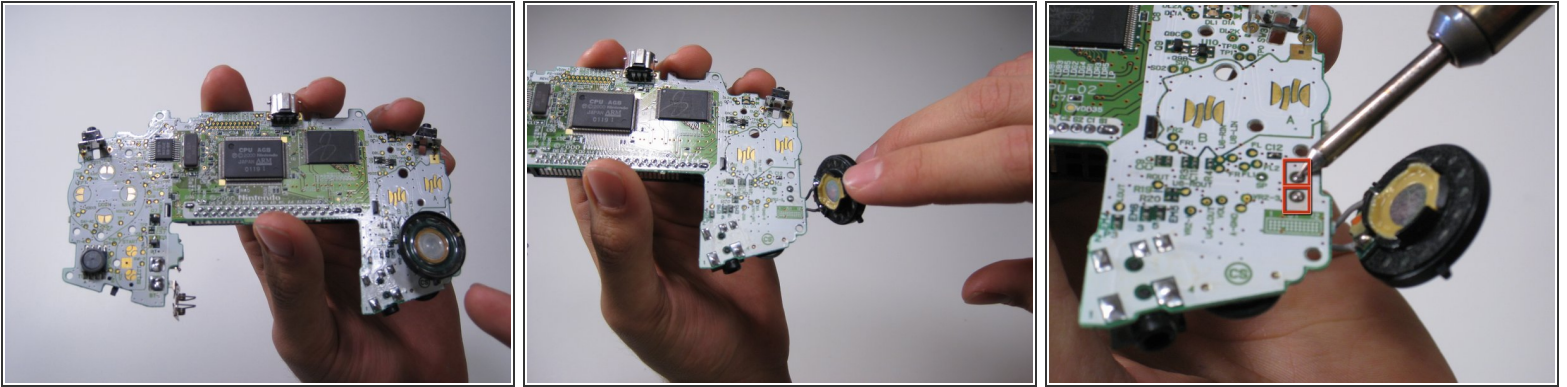

- Slightly move the speaker to the right and desolder the two wires from the logic board.

⚠ Beware of over heating the soldering kit will damage the logic board.