




Disassembling IBM ThinkPad T42 Lower Bracket

Written By: Dozuki System

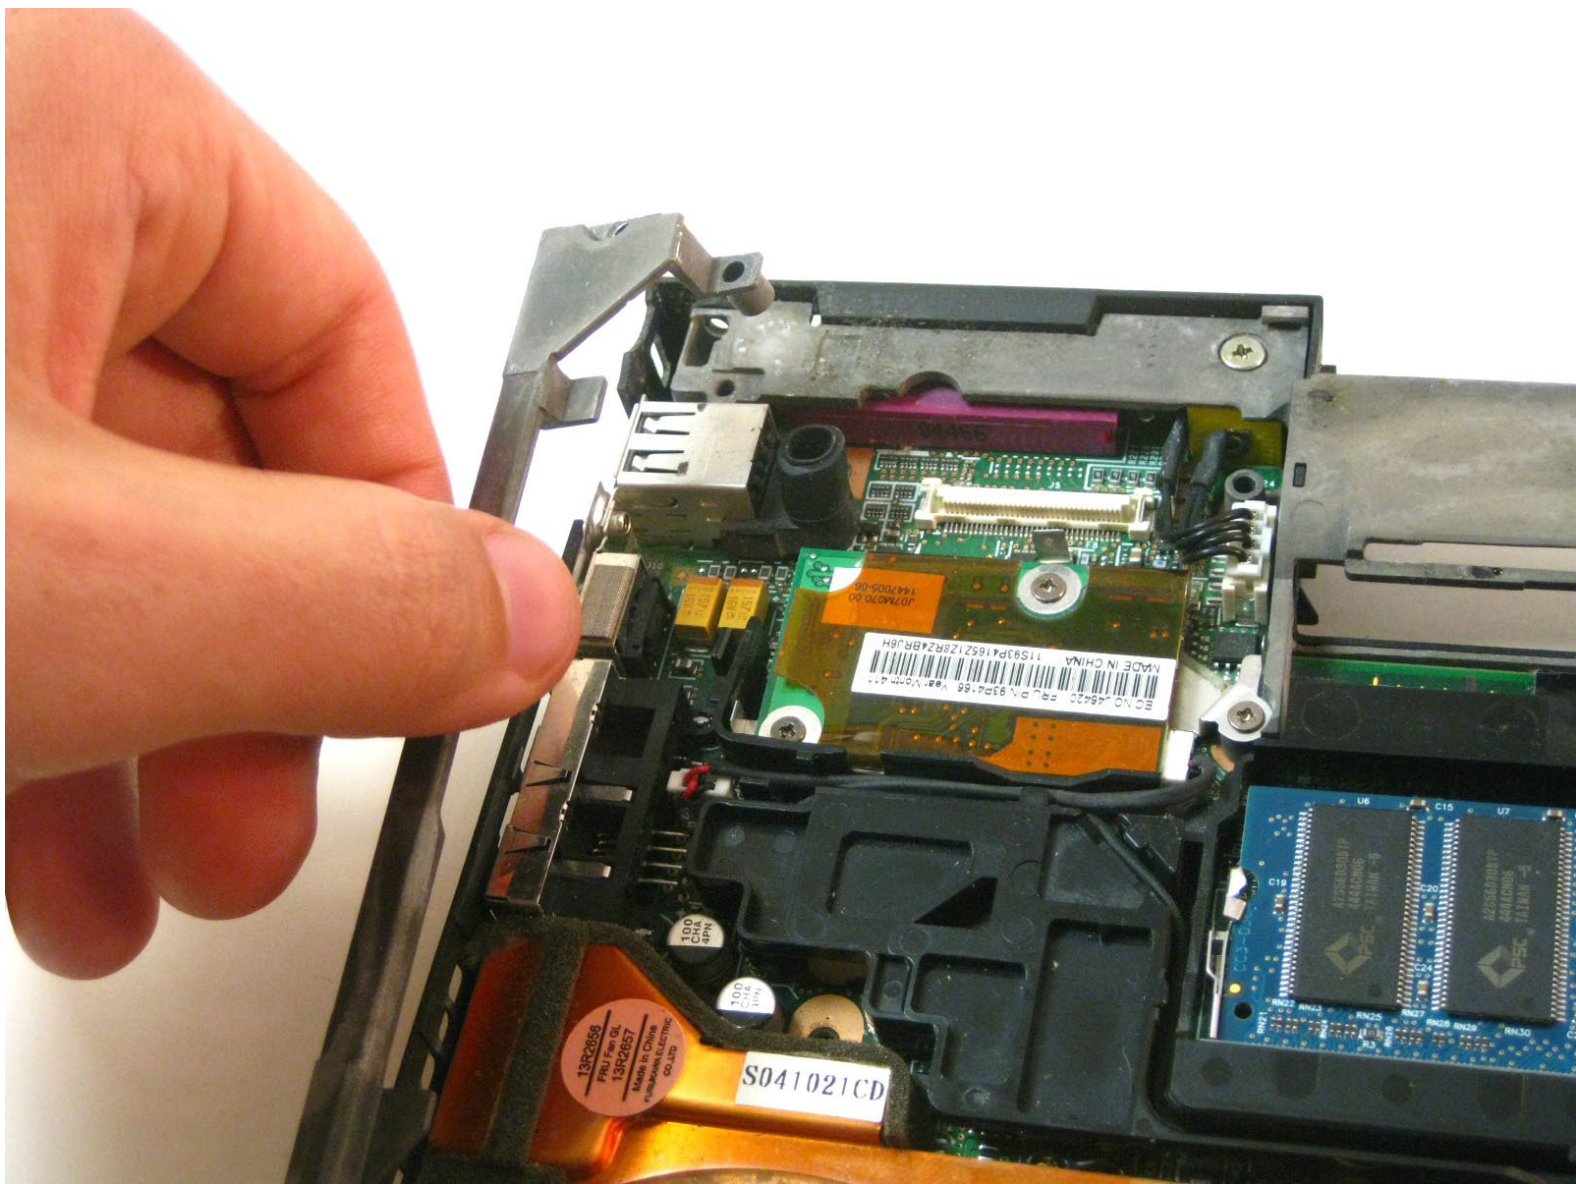

INTRODUCTION

The lower bracket needs to be removed to get to some components of the laptop.



TOOLS:


- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Disassembling IBM ThinkPad T42 Lower Bracket



- Unscrew the following screws on the underside of the T42.
- Note: for ease of reassembly, keep track of which screws go where.

Step 2

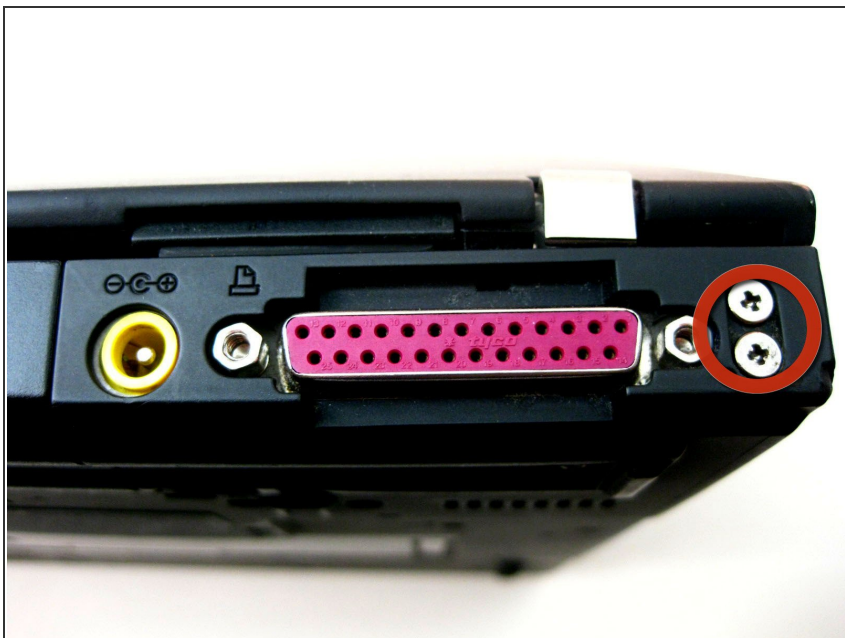


- Unscrew the 4 screws on either side of the rear end of the laptop.

Step 3




- Flip the laptop over and open the display carefully - the keyboard, palm rest and bezel will be loose.

Step 4

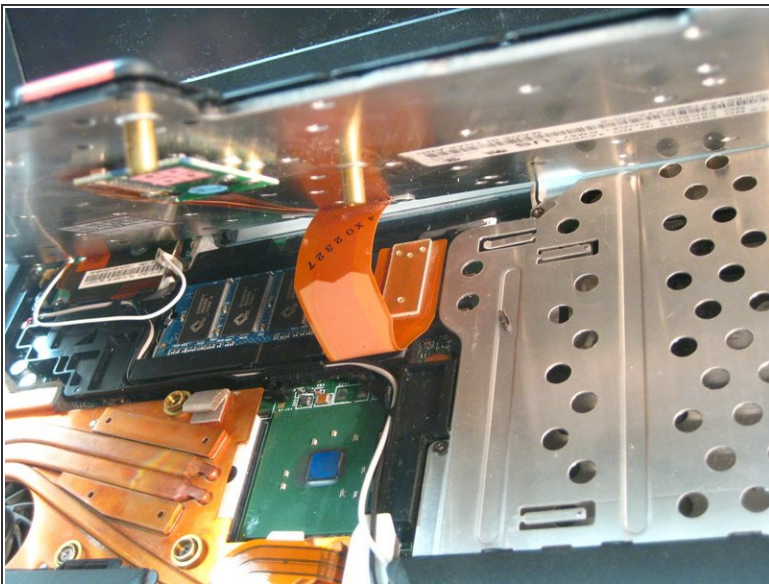


- Maneuver the palm rest away from the keyboard carefully, both the keyboard and palm rest/trackpad will come off together.
- ****WARNING**** Both the keyboard and trackpad have connectors to the motherboard. Disconnect these before completely removing either component.

Step 5

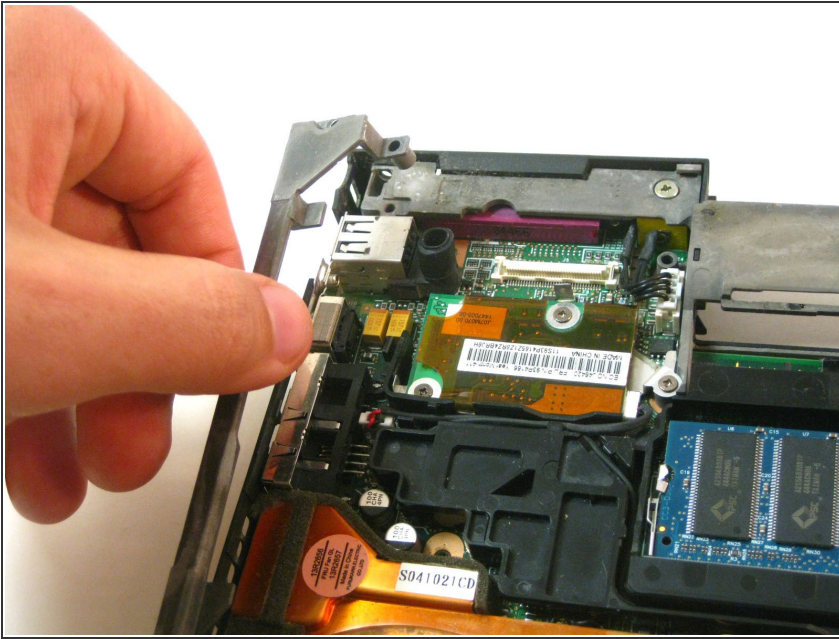

- The bracket will be free to move.

Step 6

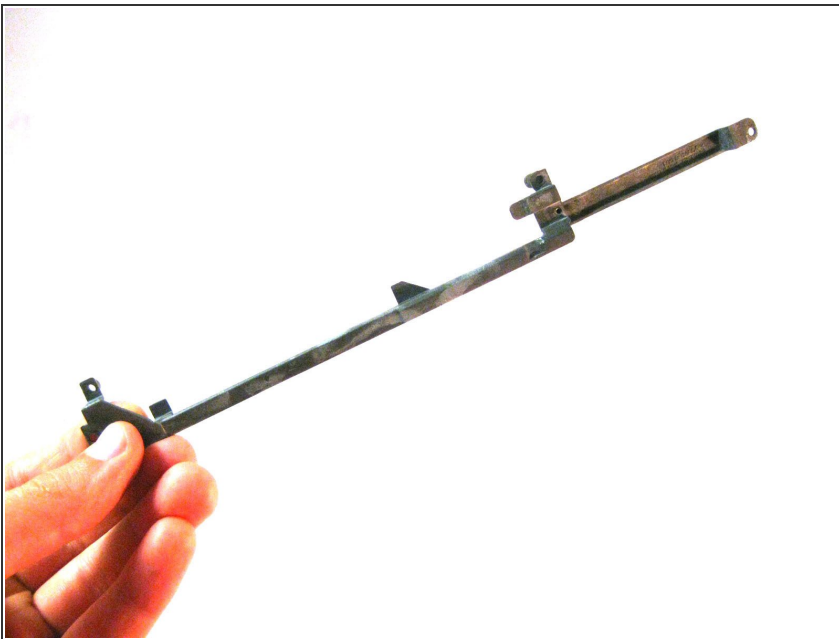

- Remove the bracket.

Step 7



- Then remove the small rubber piece covering the microphone.

To reassemble your device, follow these instructions in reverse order.