



# iBook G4 14" 1.42 GHz Keyboard Replacement

Written By: Dozuki System



# INTRODUCTION

Replacing this keyboard is easy and takes only a few minutes.



## TOOLS:


- [Coin](#) (1)
- [Phillips #00 Screwdriver](#) (1)
- [Flathead 3/32" or 2.5 mm Screwdriver](#) (1)



## PARTS:

- [iBook G4 14" Keyboard](#) (1)

## Step 1 — iBook G4 14" 1.42 GHz Keyboard Replacement

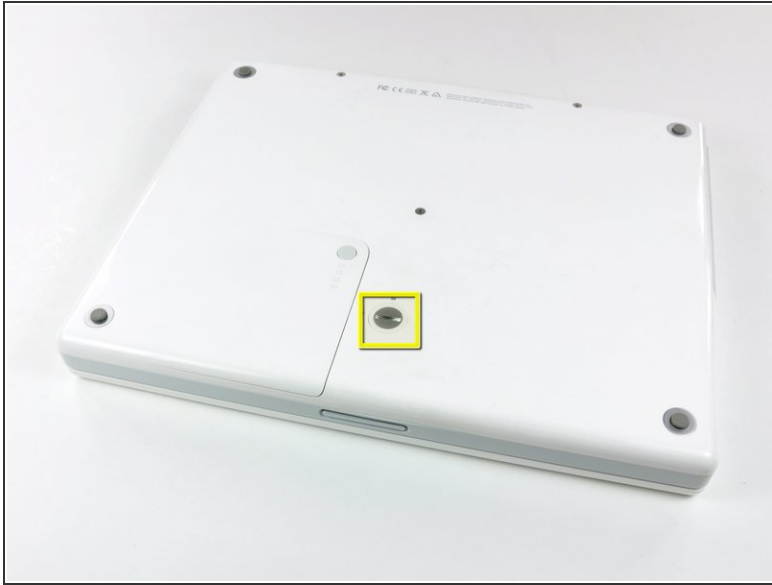

- Use a coin to rotate the battery locking screw 90 degrees clockwise.
- Lift the battery out of the computer.

## Step 2



- Pull the keyboard release tabs (shown in yellow) toward you and lift up on the keyboard until it pops free.
- If the keyboard does not come free, use a small flathead screwdriver to turn the keyboard locking screw (shown in orange) 180 degrees in either direction and try again.
- Flip the keyboard over, away from the screen, and rest it face-down on the trackpad area.

## Step 3



- Loosen the four silver Phillips screws that secure the RAM shield.
- ⓘ These screws will not come out all the way. The screws are held captive to the RAM shield to prevent them from getting lost.

## Step 4



- Remove the RAM shield from the computer.
- ⓘ The four captive screws will come out with the RAM shield.

## Step 5



- Pull the keyboard cable up from the logic board, holding the cable as close to the connector as possible.
- ★ When reassembling your iBook, make sure that you reconnect the keyboard cable before replacing the RAM shield.

To reassemble your device, follow these instructions in reverse order.