




# Sony Vaio VGN-S260 Speakers Replacement

Written By: Dozuki System

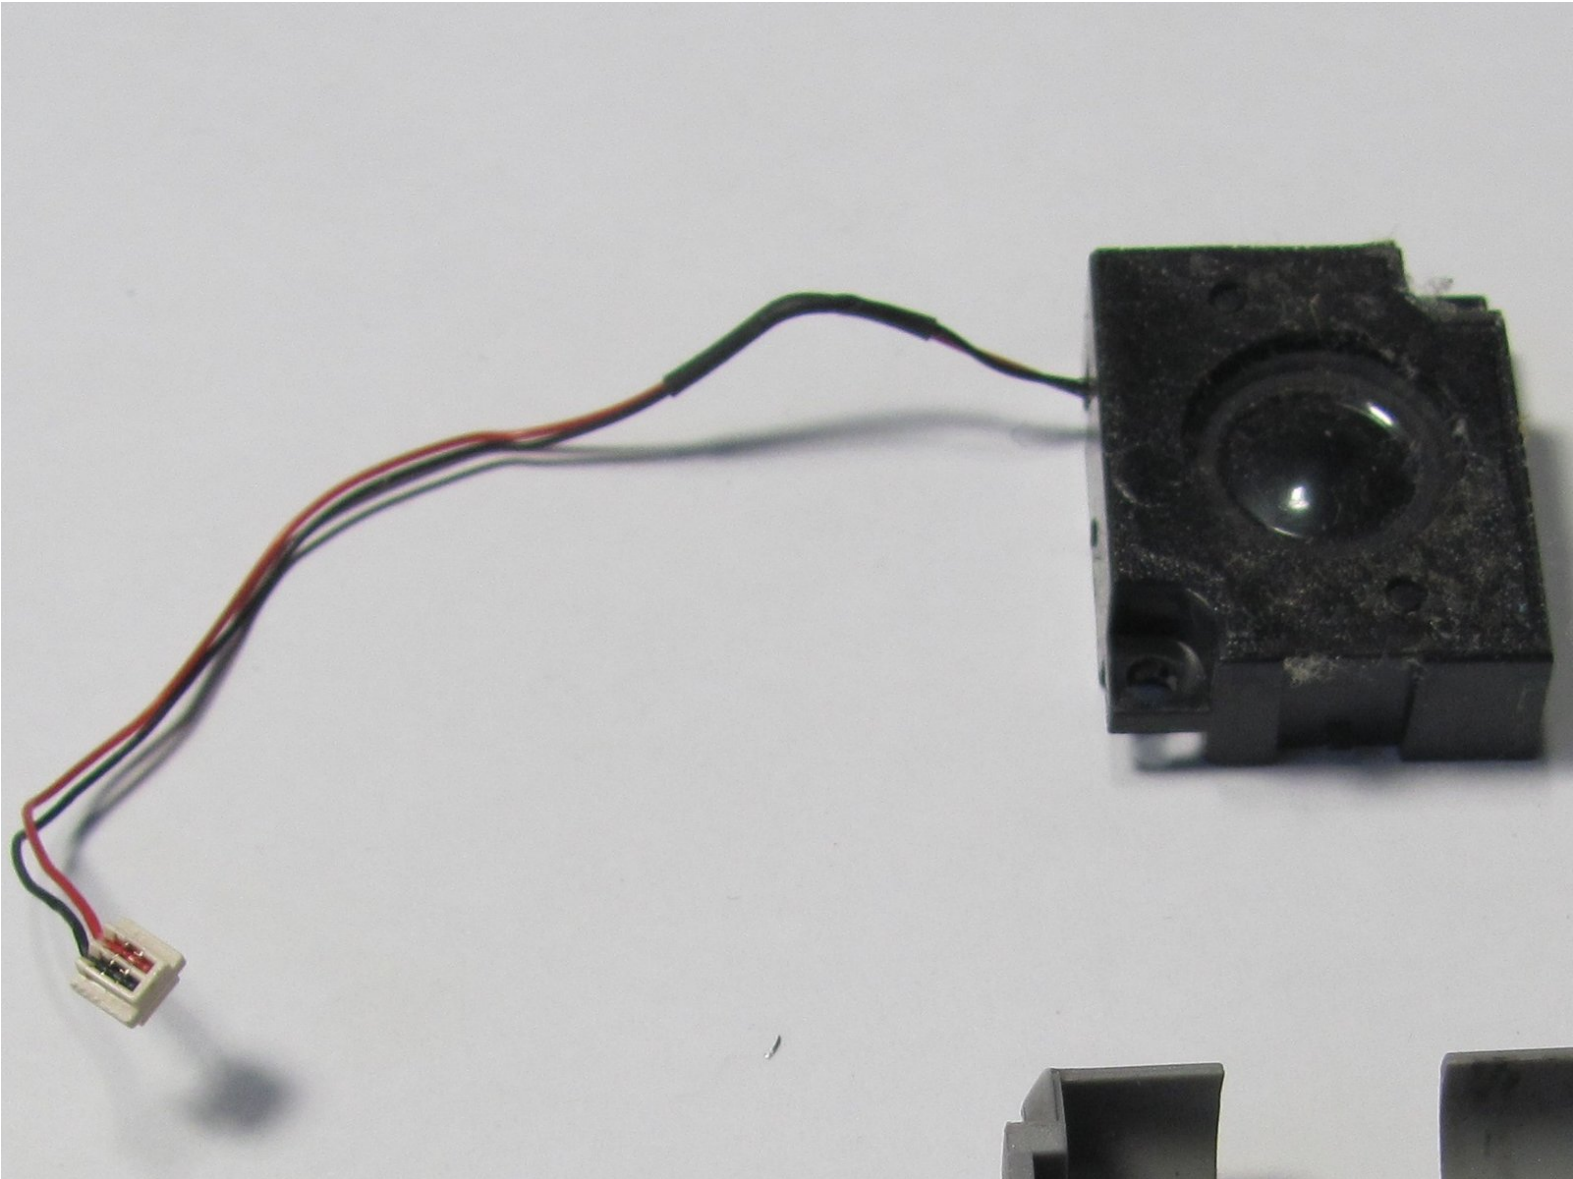

---

## INTRODUCTION

How to take out the speakers of your Sony Vaio VGN-S260



### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Sony Vaio VGN-S260 Speakers Replacement



- Flip the laptop over so the Vaio logo is facing down
- Locate the battery at the top and Find the release and unlock slides on the battery
- Slide the unlock tab to the unlock position
- Slide the release tab in the direction of the arrow, i.e. towards the unlock tab

## Step 2



- With the tabs still in the unlock position, slide the battery away from the main case.



### Step 3





- Flip the computer over so the Vaio logo is facedown
- Unscrew the 2 screws next to the battery

### Step 4





- Flip the computer over again so the Vaio logo is face up
- Open the lid

## Step 5

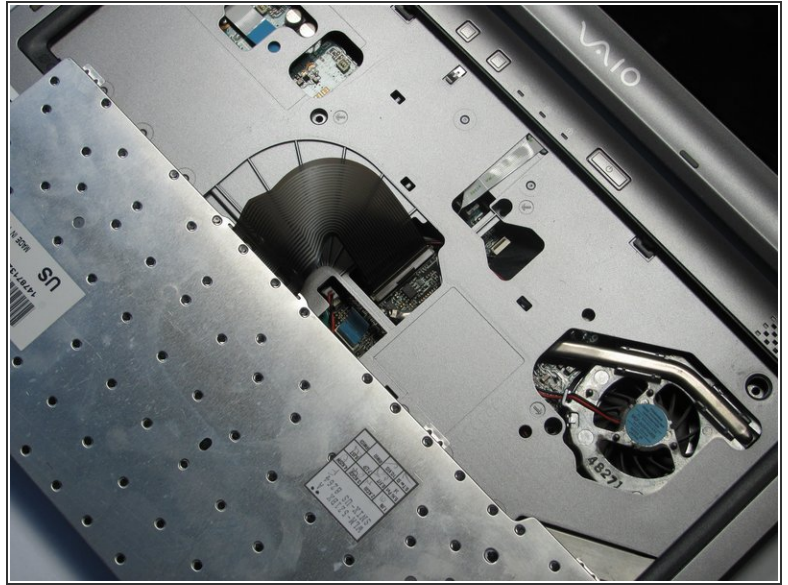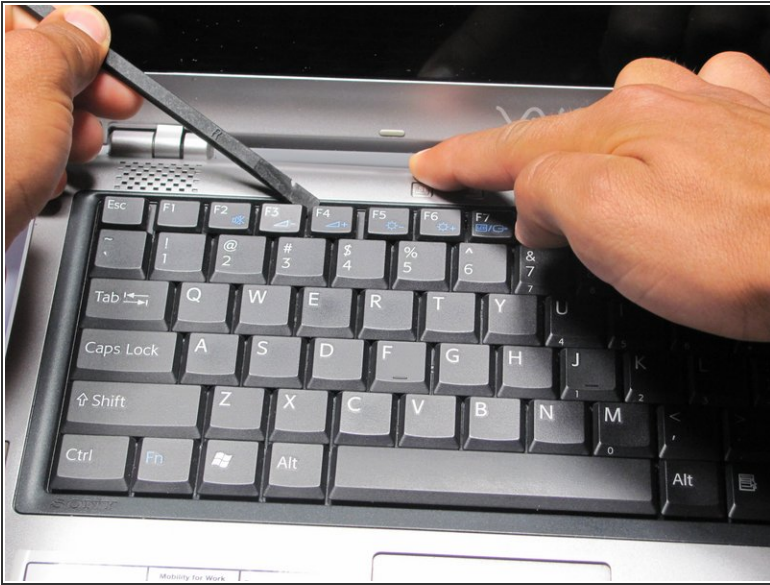

- Press down on the outer gray shell around the keyboard
  - Use the spudger to gently lift keyboard
- ⚠ Do not pull up the keyboard too far as it is attached to a ribbon underneath


## Step 6

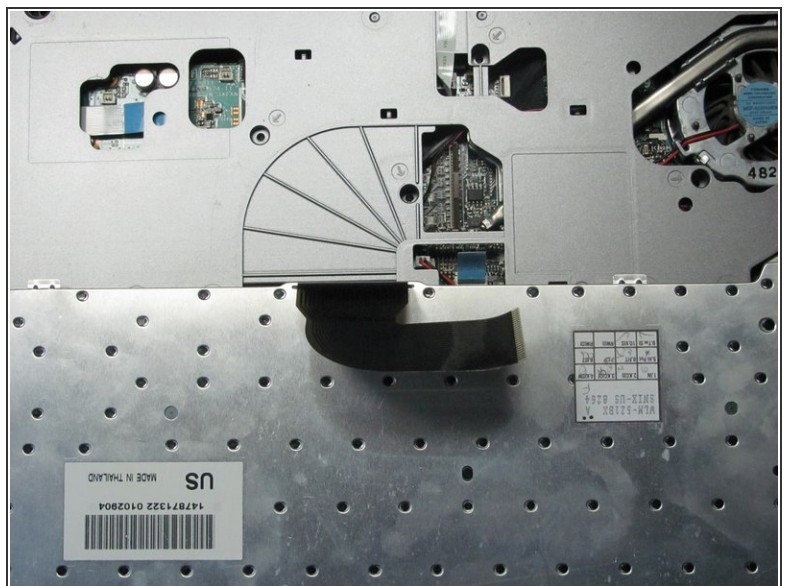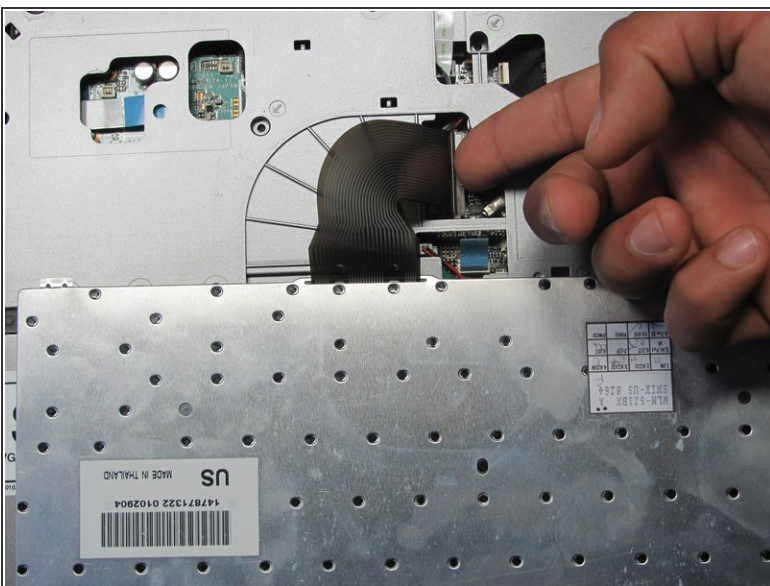

- Lift up lever underneath the ribbon to detach the keyboard.



## Step 7

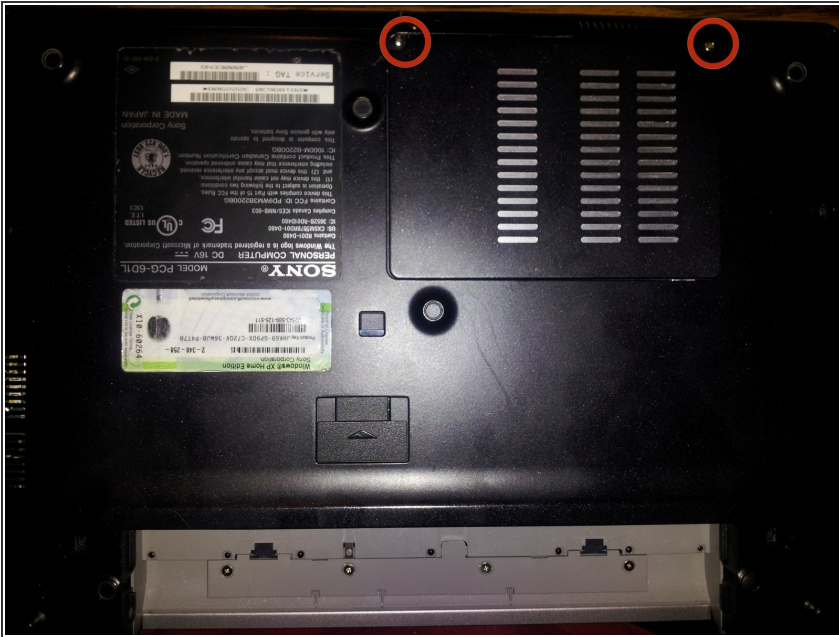


- Remove memory/wireless compartment cover

## Step 8




- Flip so the Vaio Logo is face down
- Locate and remove a total of 8 screws on the bottom.

## Step 9

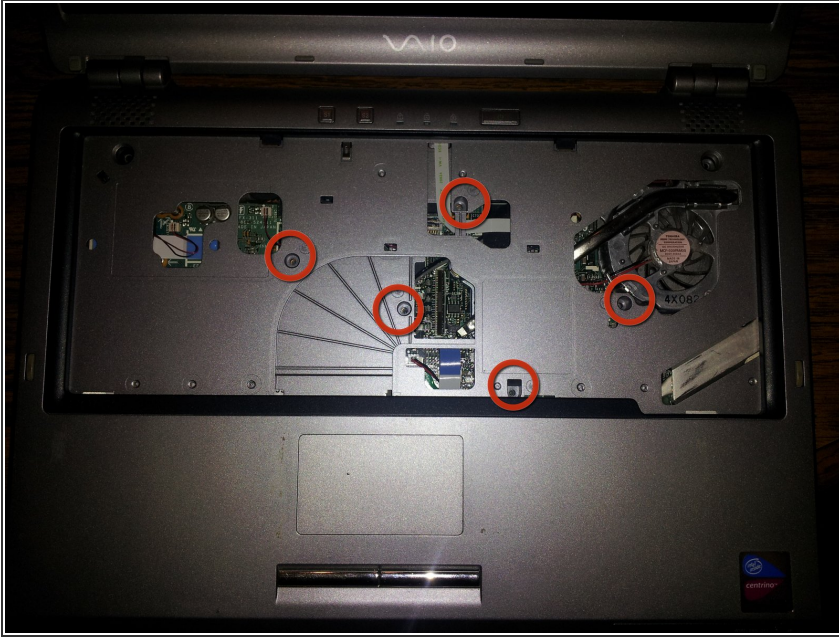

- Find and remove 5 screws (they all have arrows next to them) from cover

## Step 10

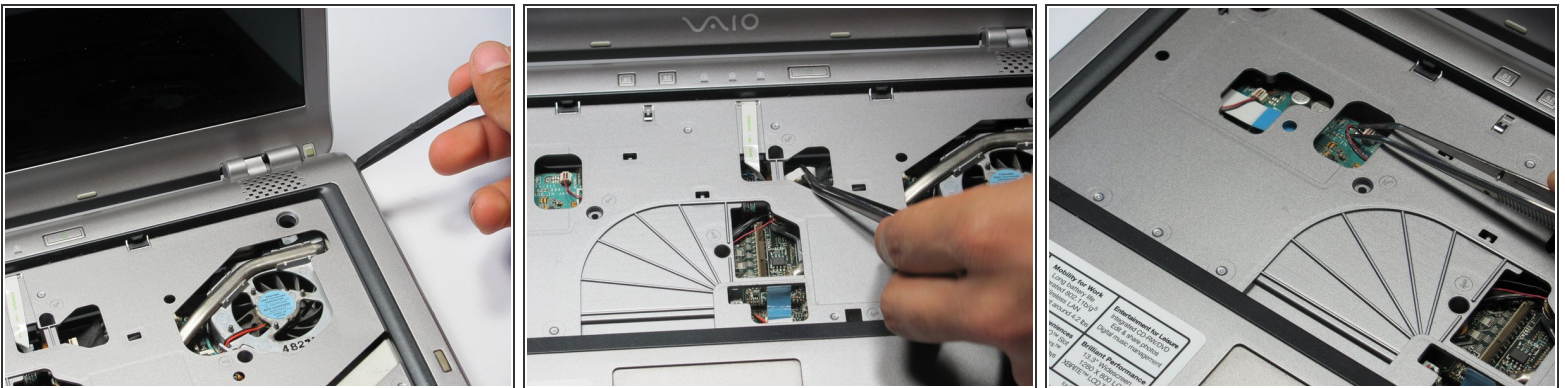

- Flip the laptop over so the Vaio logo is face up
- Use the spudger to pop up the upper casing
- ⚠ Do not lift too much as the Uppercasing is attached to wires underneath
- Remove the wires that are attaching the uppcasing to the motherboard




## Step 11



- Remove the uppercasing



## Step 12

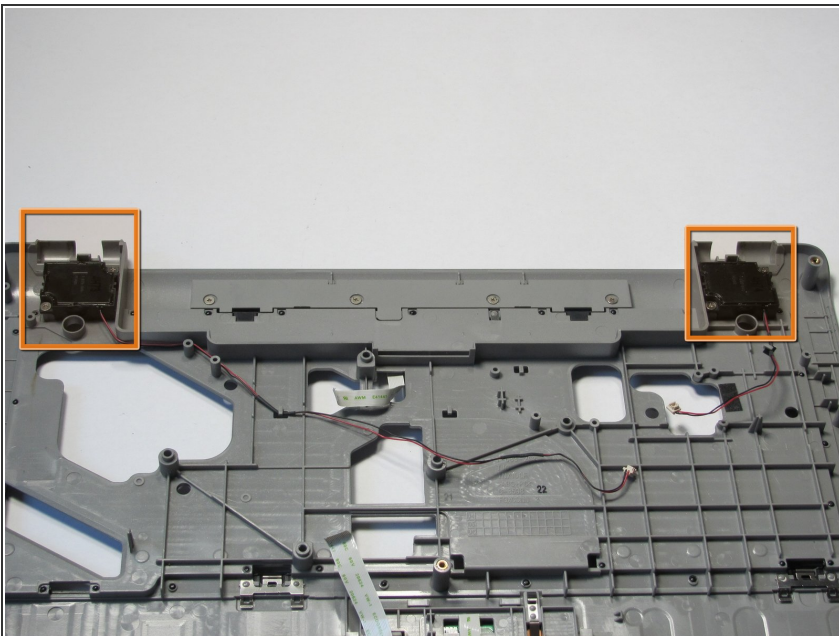

- After removing the Uppercasing, flip it over and locate the two black speakers



## Step 13

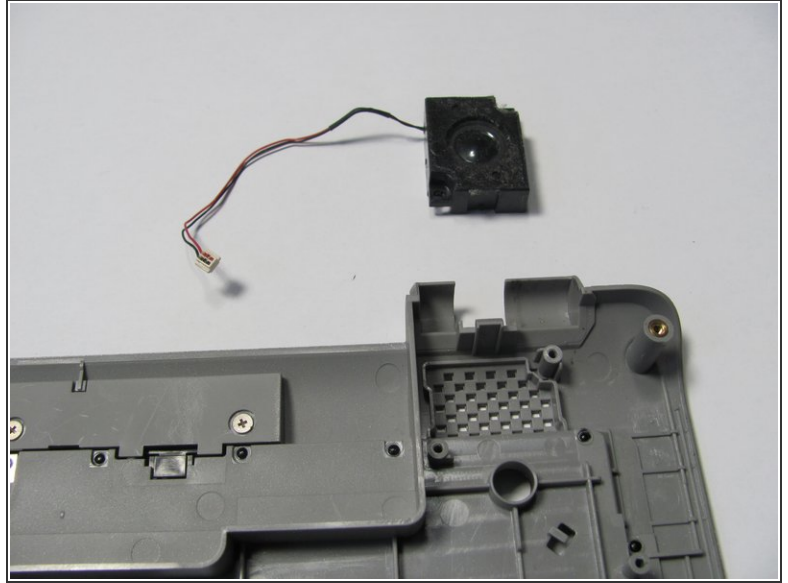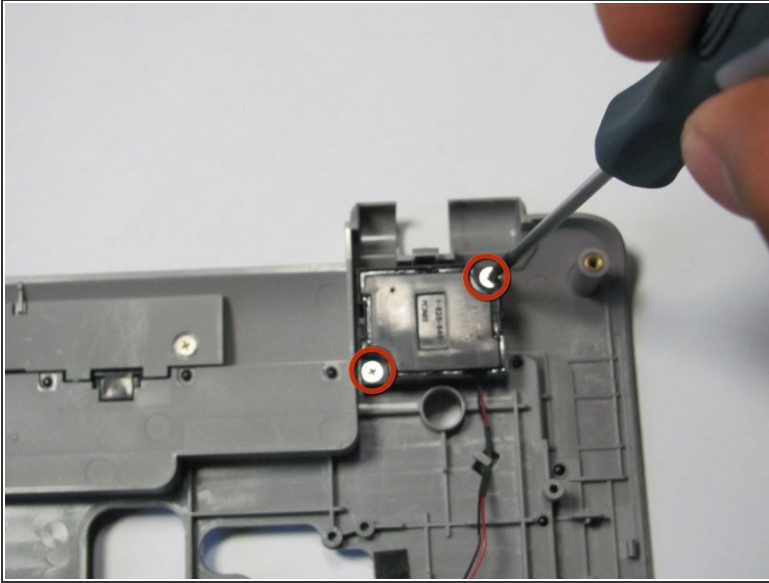

- Remove the screws on the speakers
- ⓘ Each speaker will have two screws
- Remove the speakers

To reassemble your device, follow these instructions in reverse order.