




# Sony Vaio VGN-S260 Hard Drive Replacement

Written By: Dozuki System

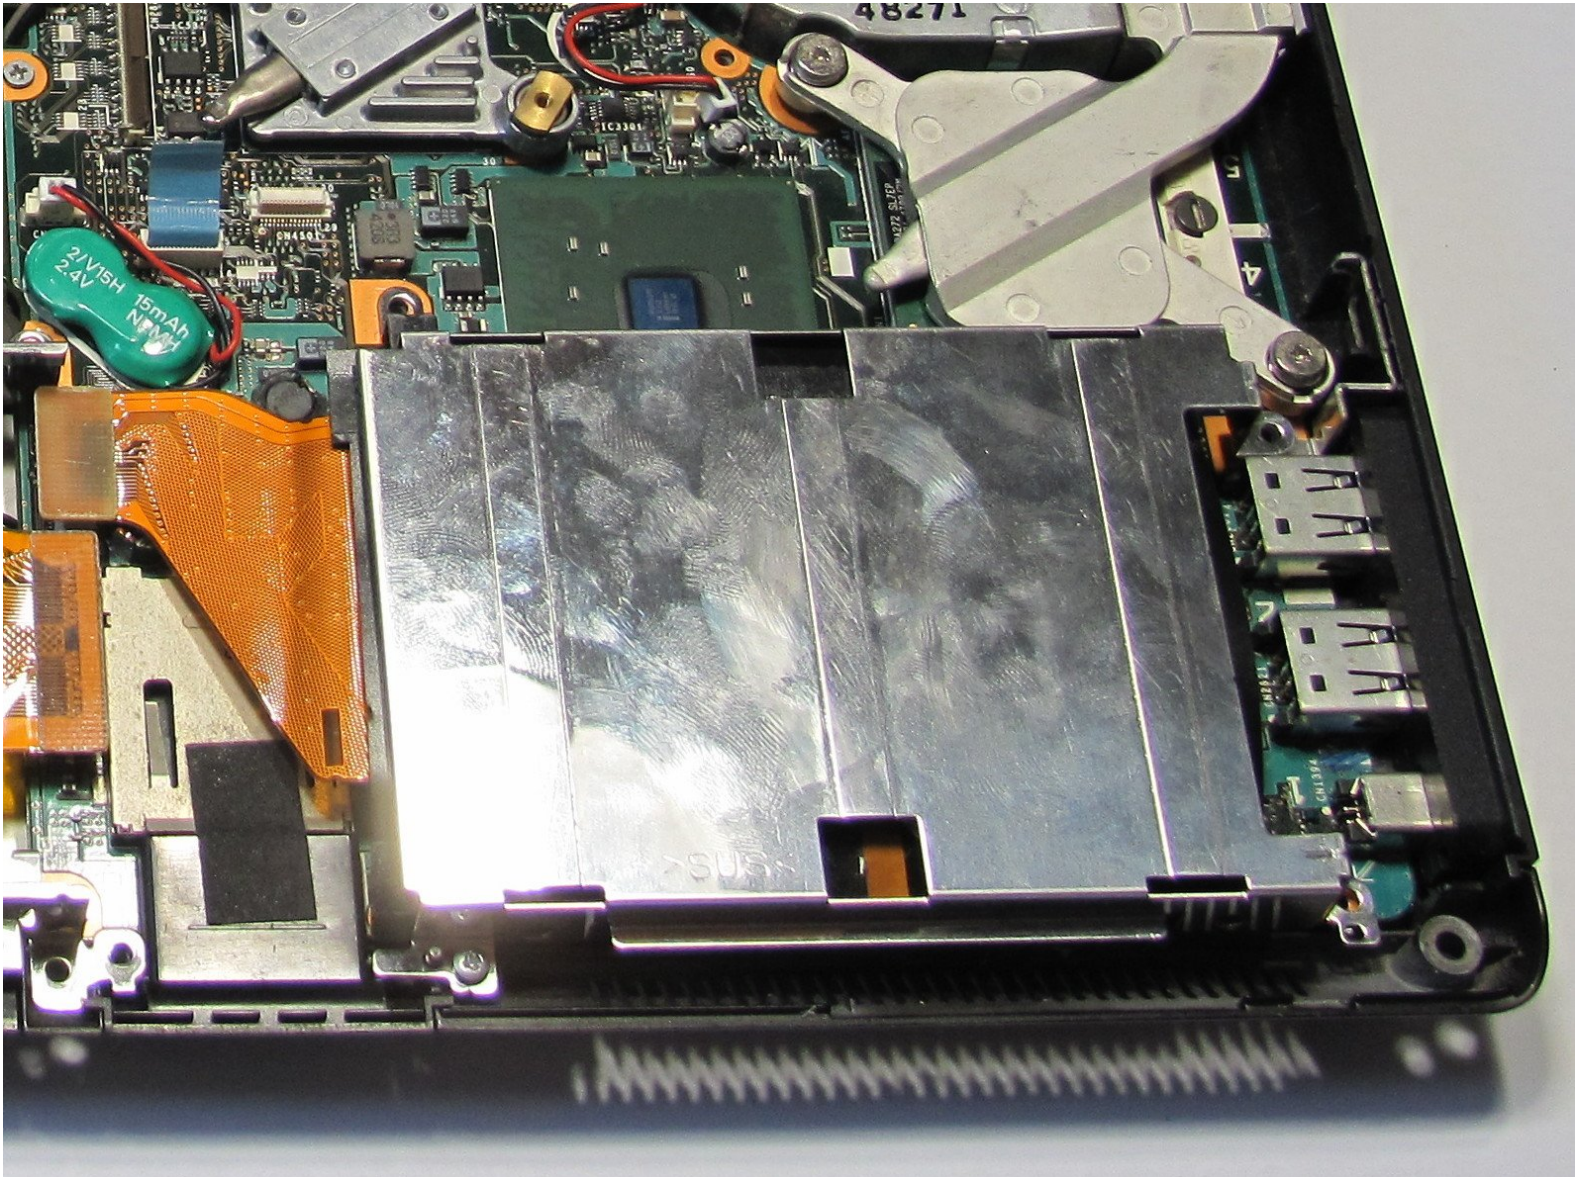

---

## INTRODUCTION

How to take out the hard drive of the Sony Vaio VGN-S260 laptop



### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-



## Step 1 — Sony Vaio VGN-S260 Hard Drive Replacement



- Flip the laptop over so the Vaio logo is facing down
- Locate the battery at the top and Find the release and unlock slides on the battery
- Slide the unlock tab to the unlock position
- Slide the release tab in the direction of the arrow, i.e. towards the unlock tab

## Step 2



- With the tabs still in the unlock position, slide the battery away from the main case.

## Step 3



- Flip the computer over so the Vaio logo is facedown
- Unscrew the 2 screws next to the battery



## Step 4



- Flip the computer over again so the Vaio logo is face up
- Open the lid





## Step 5

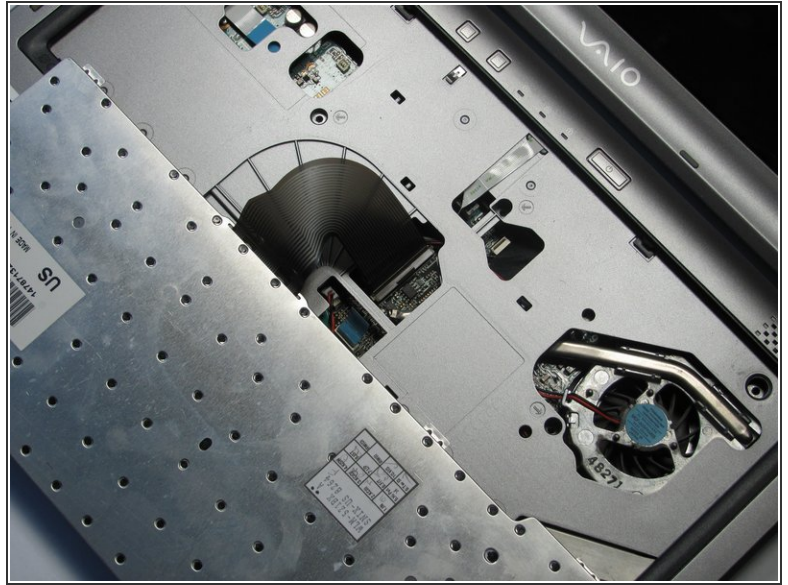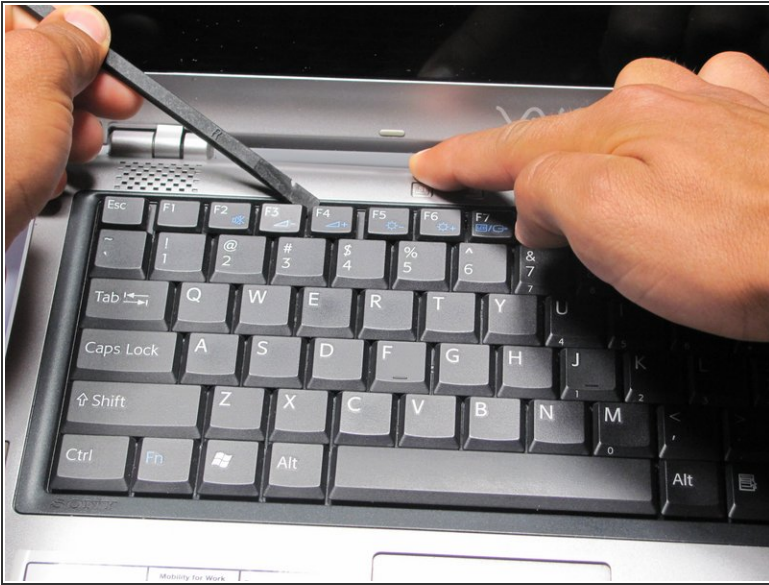


- Press down on the outer gray shell around the keyboard
  - Use the spudger to gently lift keyboard
- ⚠ Do not pull up the keyboard too far as it is attached to a ribbon underneath

## Step 6

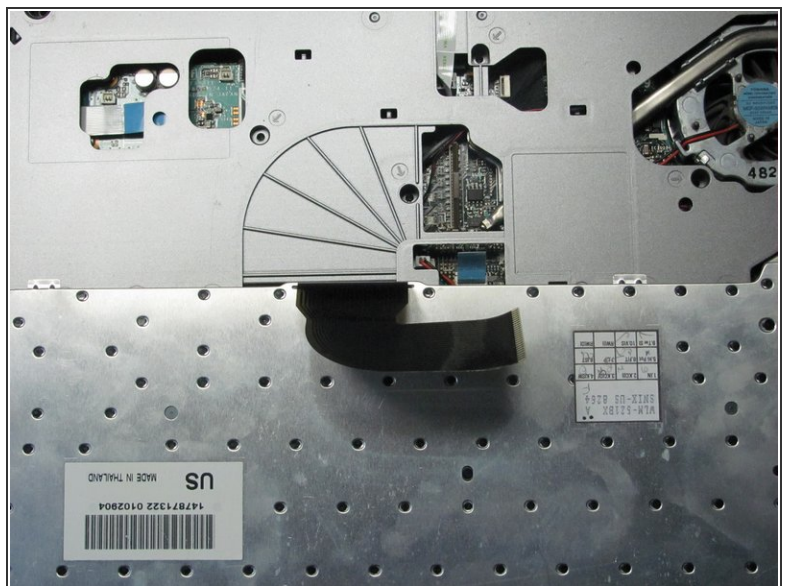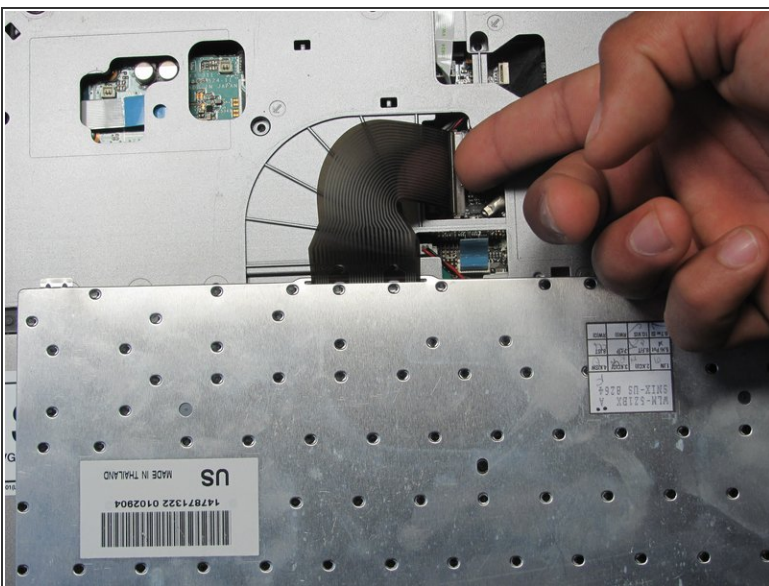

- Lift up lever underneath the ribbon to detach the keyboard.

## Step 7

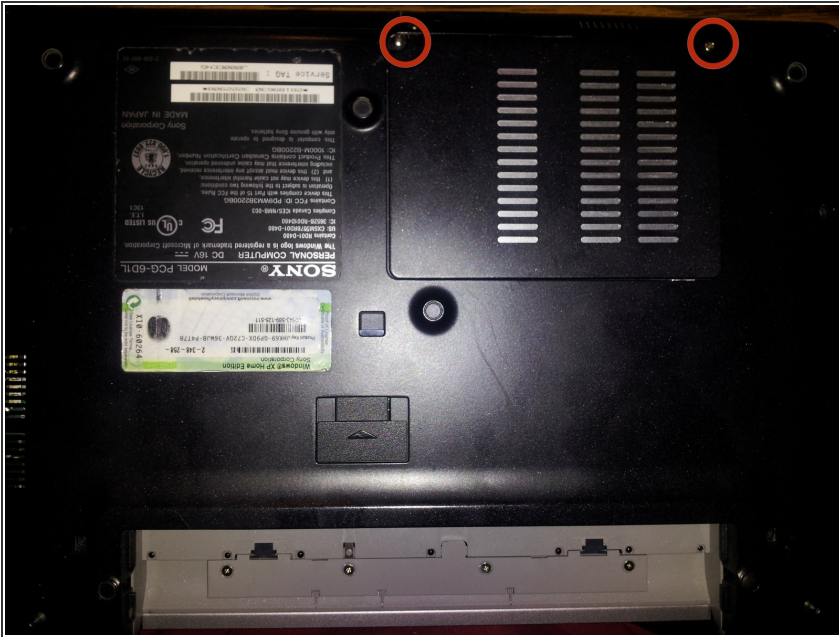

- Remove memory/wireless compartment cover


## Step 8



- Flip so the Vaio Logo is face down
- Locate and remove a total of 8 screws on the bottom.




## Step 9

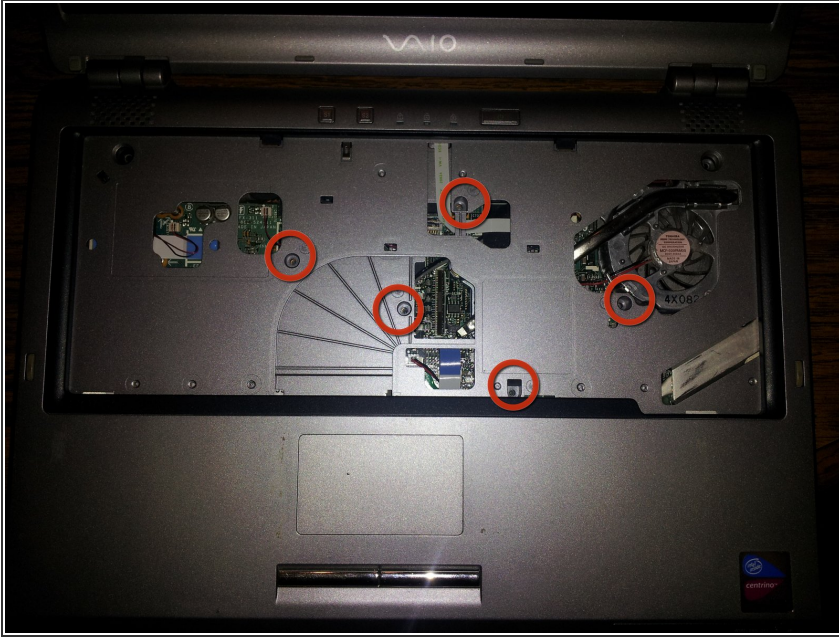

- Find and remove 5 screws (they all have arrows next to them) from cover

## Step 10

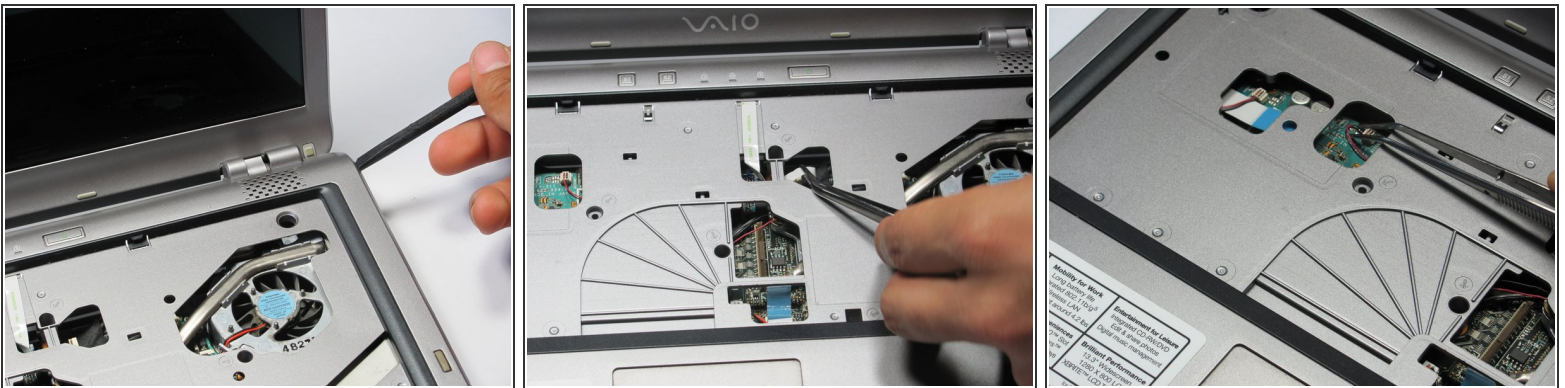



- Flip the laptop over so the Vaio logo is face up
- Use the spudger to pop up the upper casing
- ⚠ Do not lift too much as the Uppercasing is attached to wires underneath
- Remove the wires that are attaching the uppcasing to the motherboard

## Step 11



- Remove the uppercasing


## Step 12

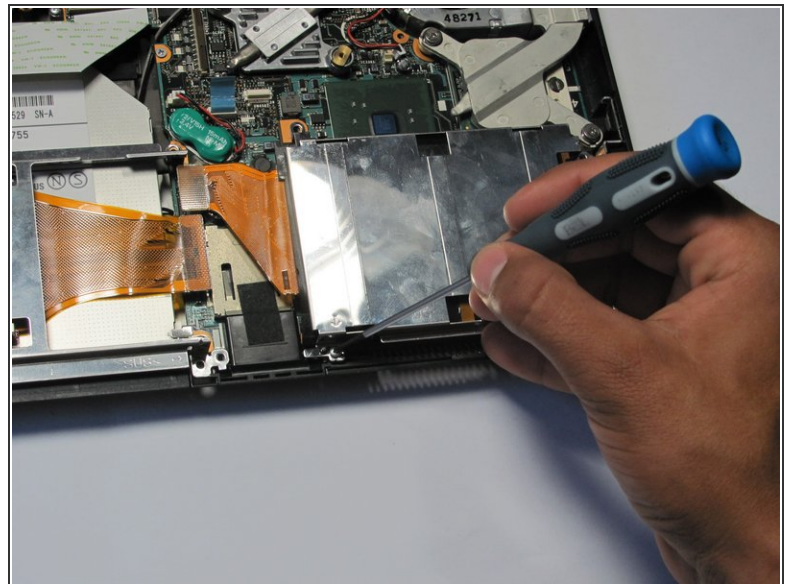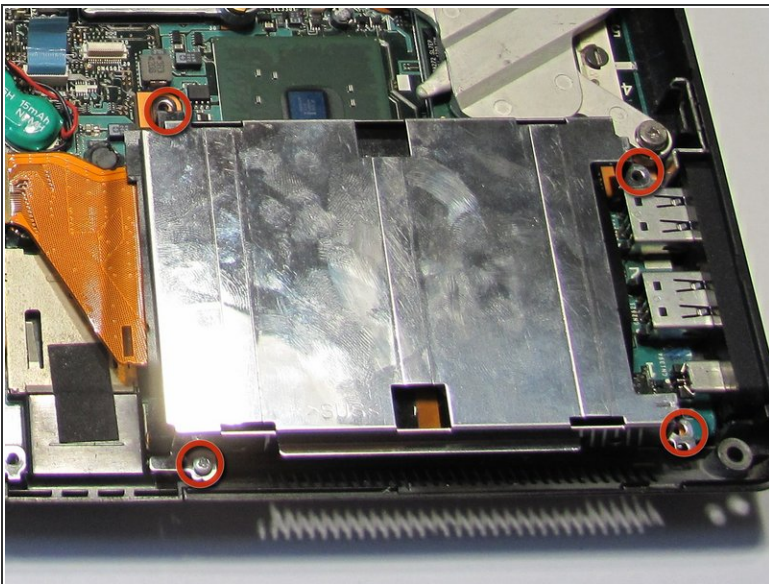

- Locate the screws holding the hard drive casing in place.
- Remove the screws



## Step 13

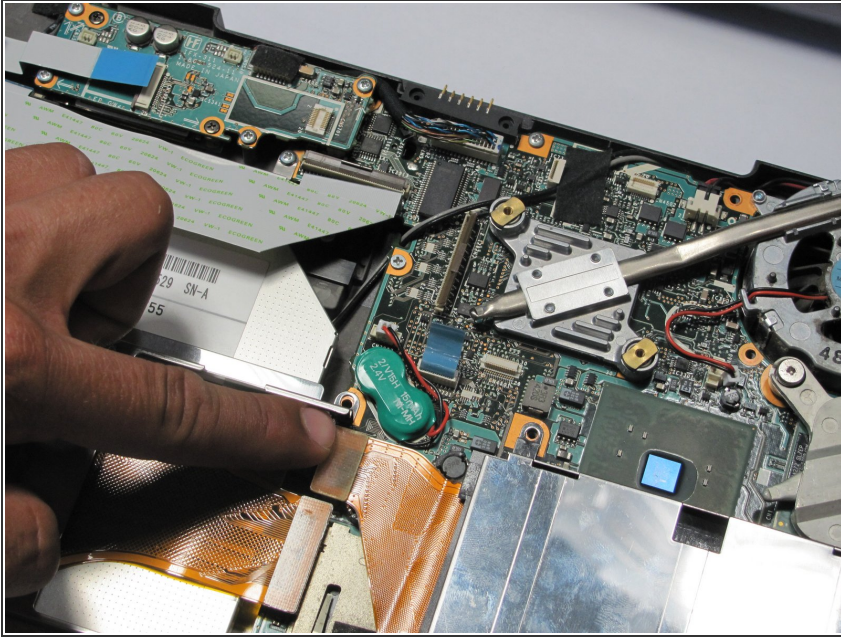

- Find orange ribbon that is connected to the hard drive.
- Find the holder of the ribbon and pop the ribbon off from it

## Step 14



- Remove the casing and the orange ribbon

To reassemble your device, follow these instructions in reverse order.