



# iBook G4 14" 1.42 GHz Rear Display Bezel Replacement

Written By: Dozuki System



# INTRODUCTION

Replace the rear display bezel in your iBook G4 14" 1.42 GHz.



## TOOLS:


- [1.5mm Hex Screwdriver](#) (1)
- [Coin](#) (1)
- [Flathead 3/32" or 2.5 mm Screwdriver](#) (1)
- [Spudger](#) (1)



## PARTS:

- [iBook G4 14" Rear Display Bezel](#) (1)

## Step 1 — iBook G4 14" 1.42 GHz Rear Display Bezel Replacement

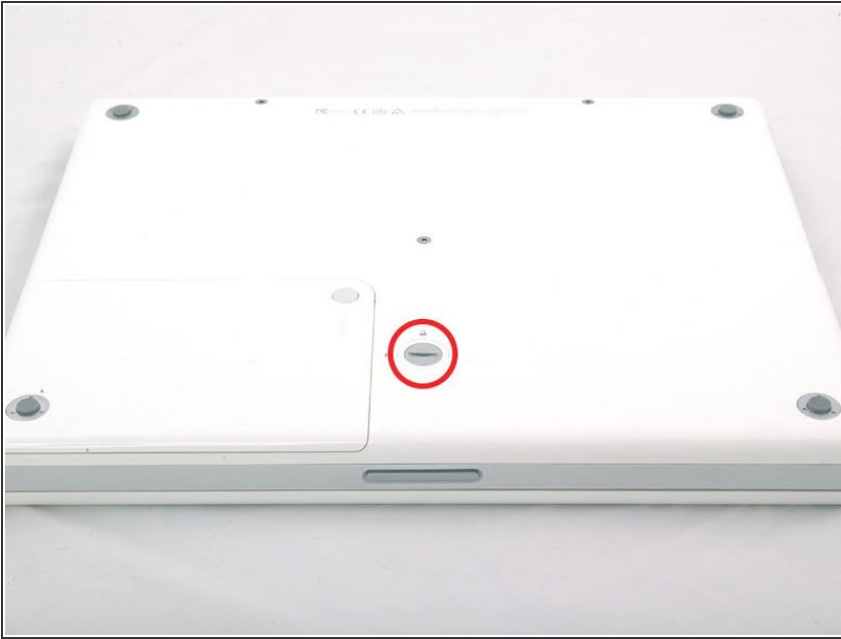


- Use a coin to rotate the battery locking screw 90 degrees clockwise.

## Step 2



- Lift the battery out of the computer.

## Step 3

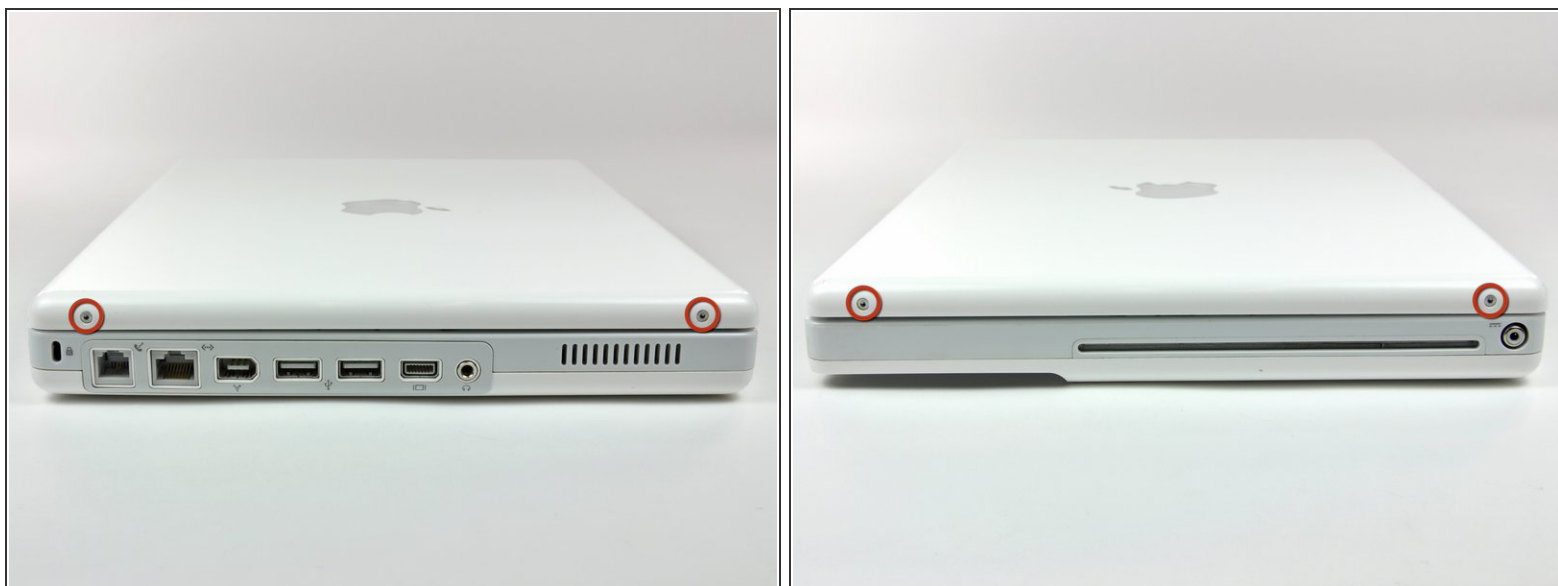

- Use a 1.5 mm hex screwdriver to remove the two hex screws on either side of the display (four screws total).
- If you don't have a 1.5 mm hex driver, you can probably get these screws out with a T6 Torx screwdriver. However, if you use a T6 Torx driver you'll be more likely to strip the screws.

## Step 4



- Insert the flat end of a spudger perpendicular to the face of the display into the gap between the front and rear bezels near the upper left corner of the display.
- Rotate the spudger away from the display to pry the rear bezel off the front bezel.


## Step 5



- Run your spudger along the top edge of the front display bezel to evenly separate the two bezels.



## Step 6

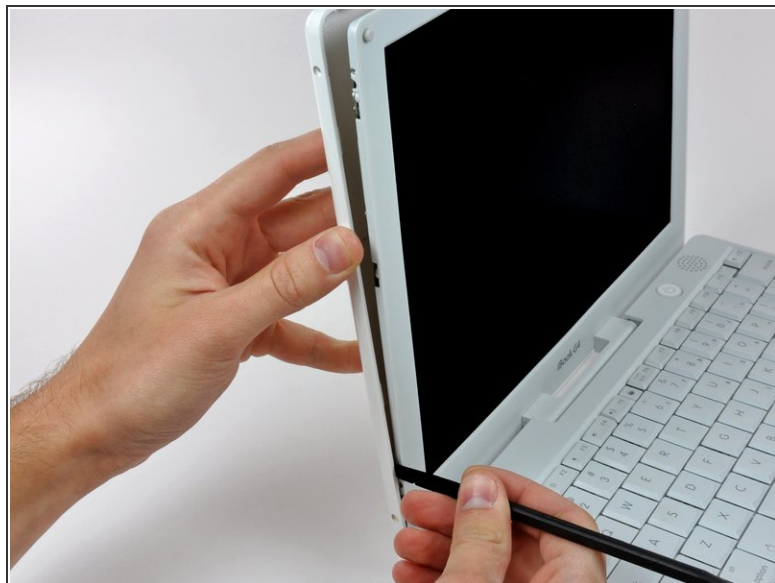

- Working down from the upper left corner, use the flat end of a spudger to pry the rear bezel away from the left edge of the display.

## Step 7



- Use the flat end of a spudger to pry the rear bezel away from the right edge of the display.
- If necessary, pry along the bottom edge of the rear bezel to separate it from the display assembly.

## Step 8



- Lift the rear bezel off the display assembly.

To reassemble your device, follow these instructions in reverse order.